



TOYOTA

ALWAYS A
BETTER WAY

Corolla (HB, TS & Sedan)

Wind deflectors - front kit normal

Installation Instructions

Model year: (HB) 2019/01, (TS) 2019/02, (Sedan) 2019/01

Vehicle code: (HB) **E*1**-DH***W, (TS) **E*1**-DW***W, (Sedan) Z*E21**-DE***W


Part number: 08163-12810

Manual reference number: AIM 004 411-0

Revision record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps

08163-12810

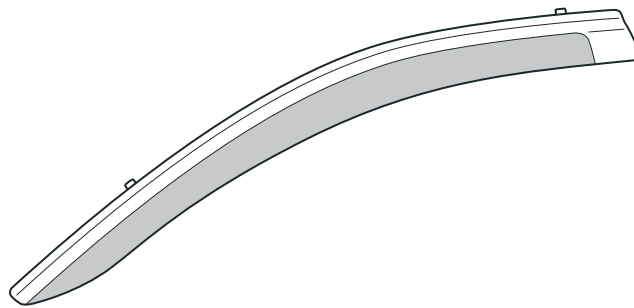



A

1x

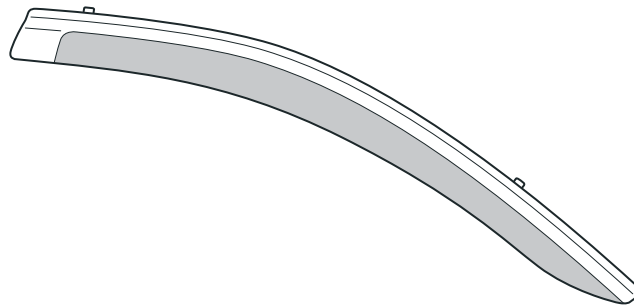

B


1x

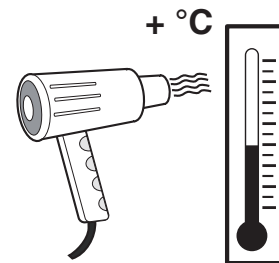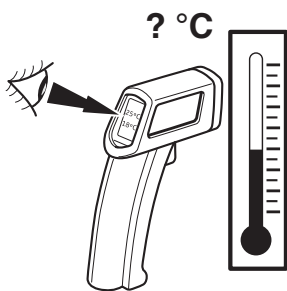

 **AIM 003 516-***



LHS=RHS

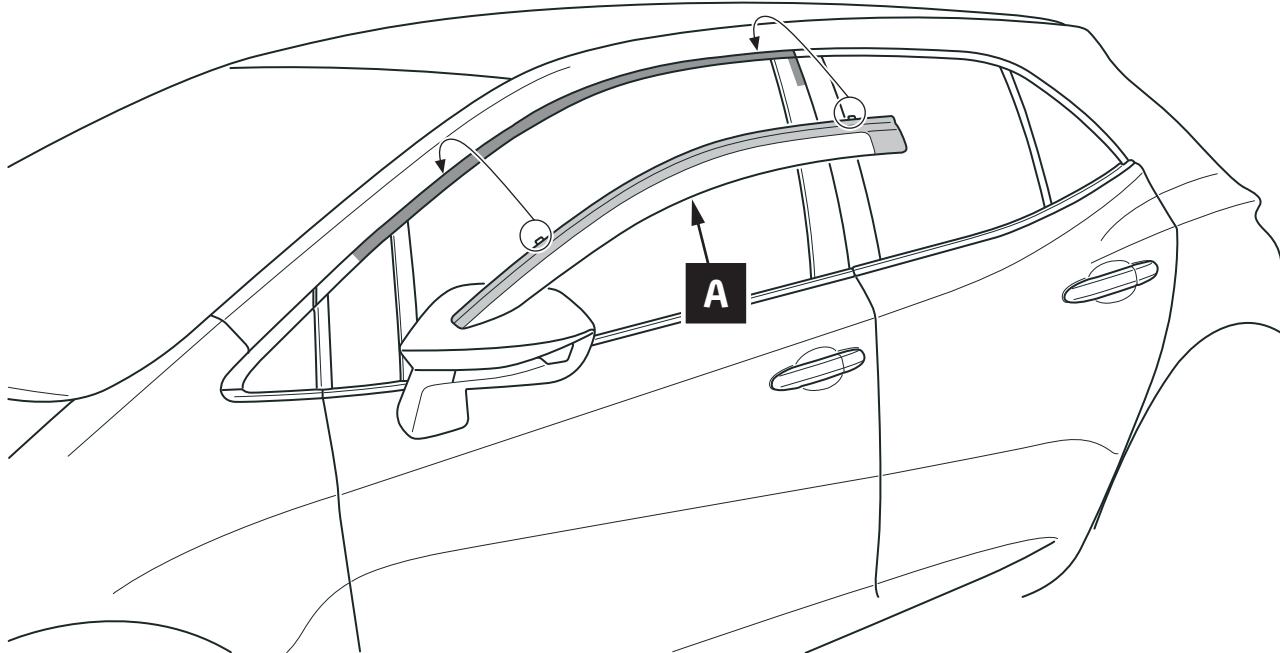




INFO




Material Safety Data Sheet





Technical Data Sheet

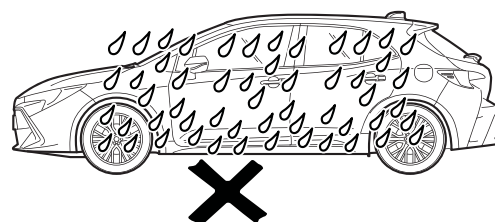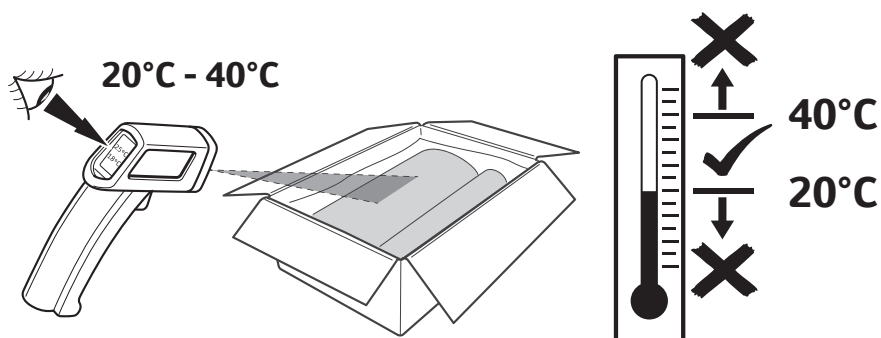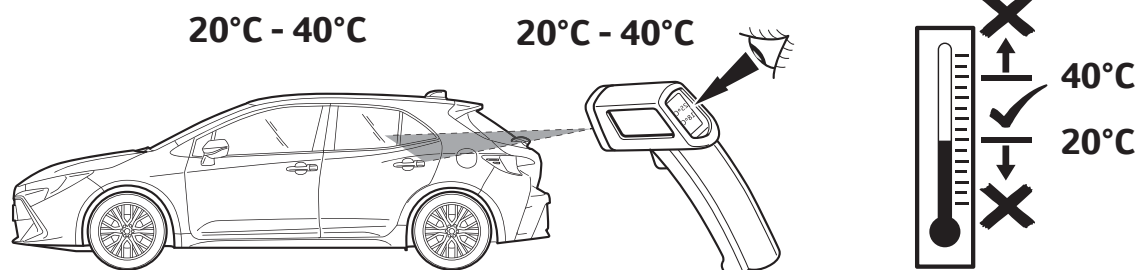


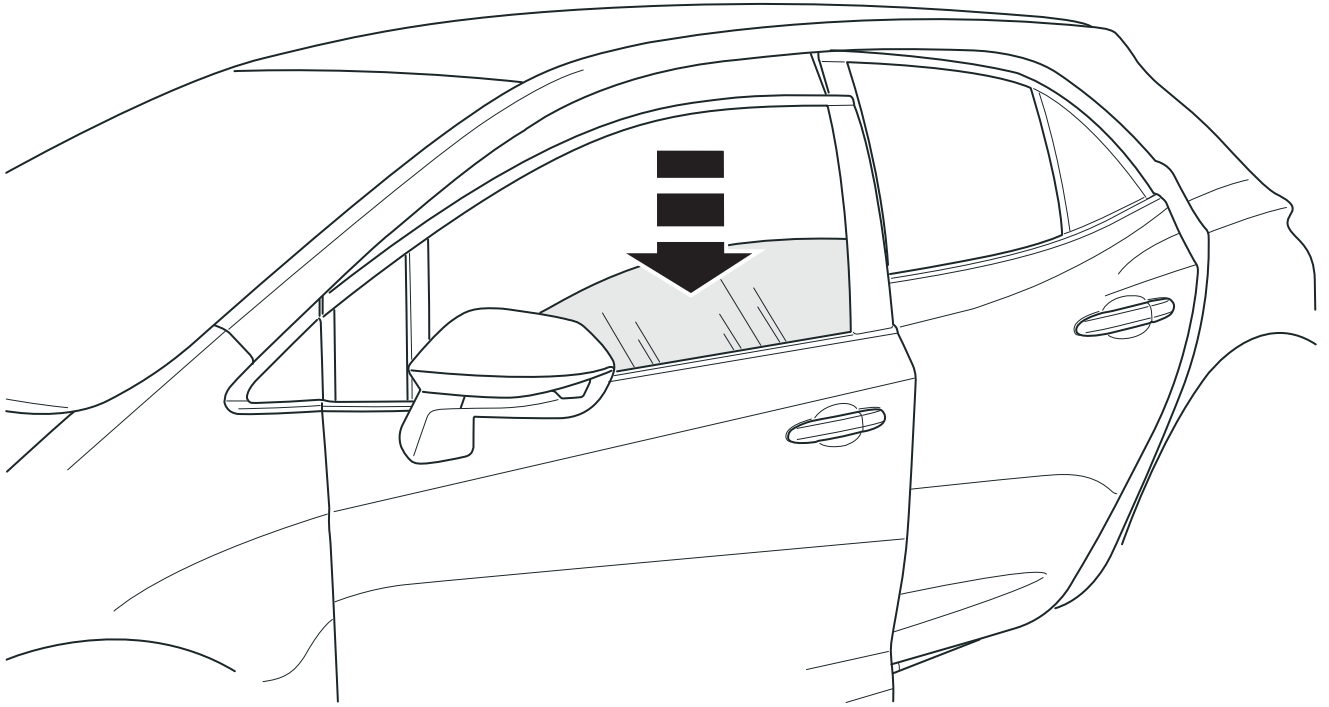

1

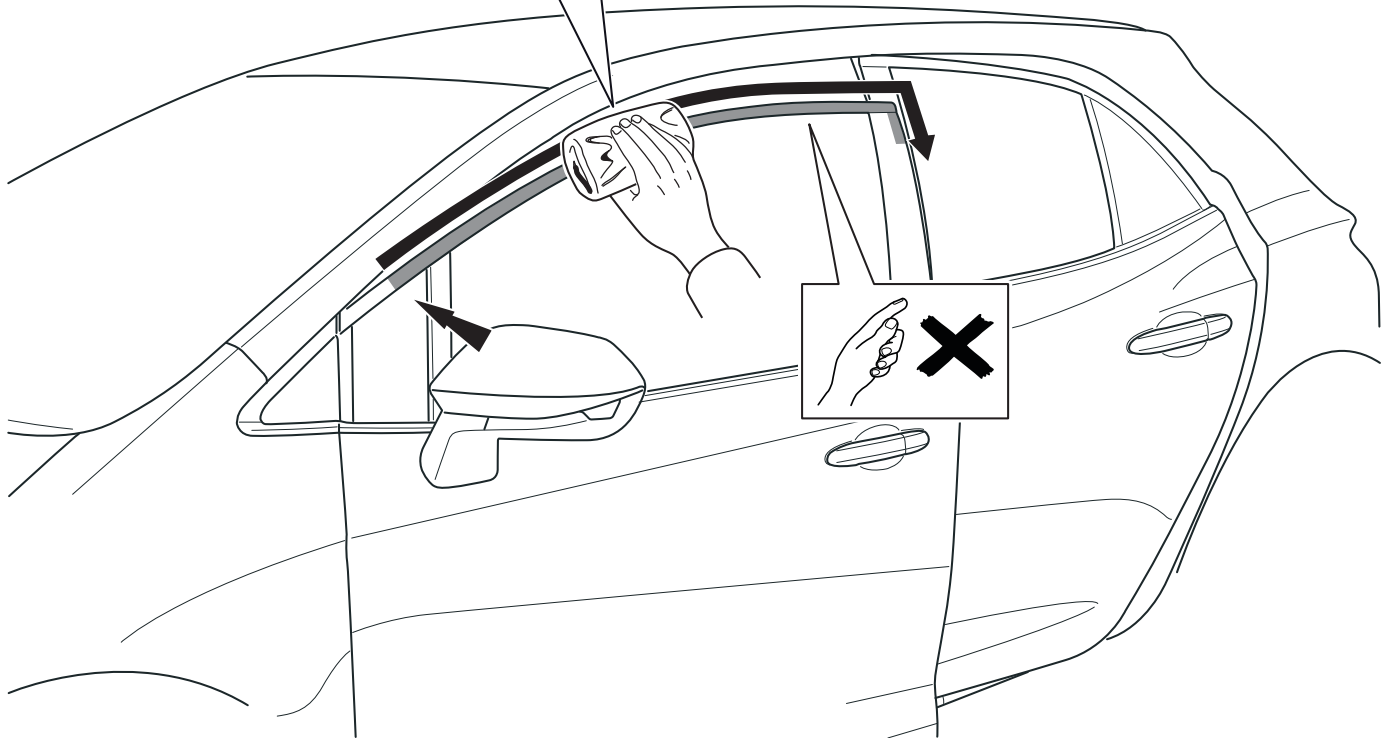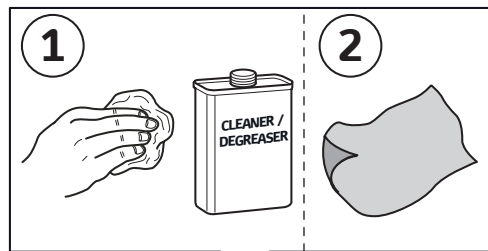


2

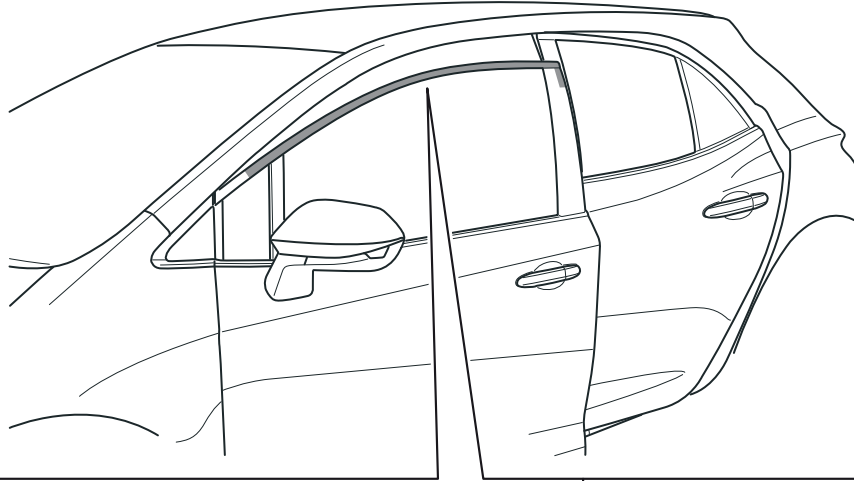




<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 4</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 4</p>	<p>INFO</p> <p>3 → 10</p>



3

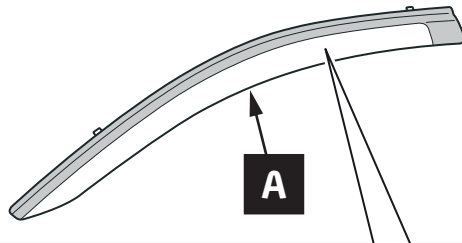



<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 5</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 5</p>	<p>INFO</p> <p>4 → 10</p>

4

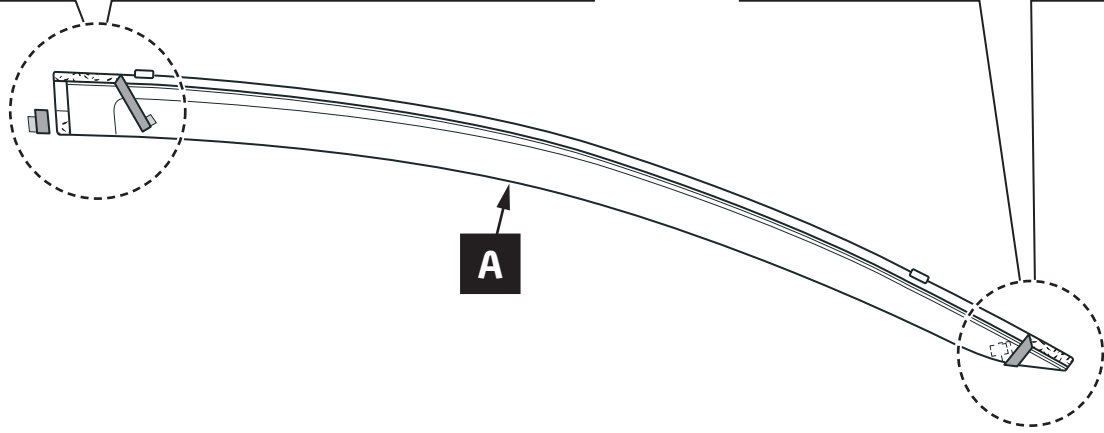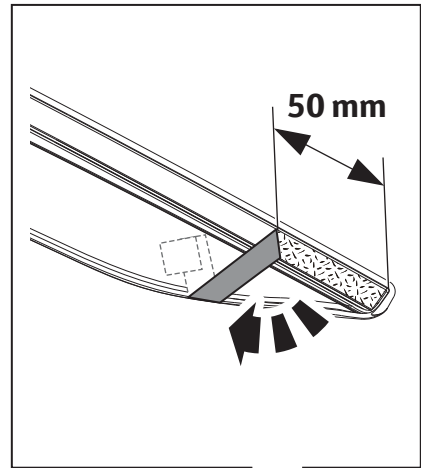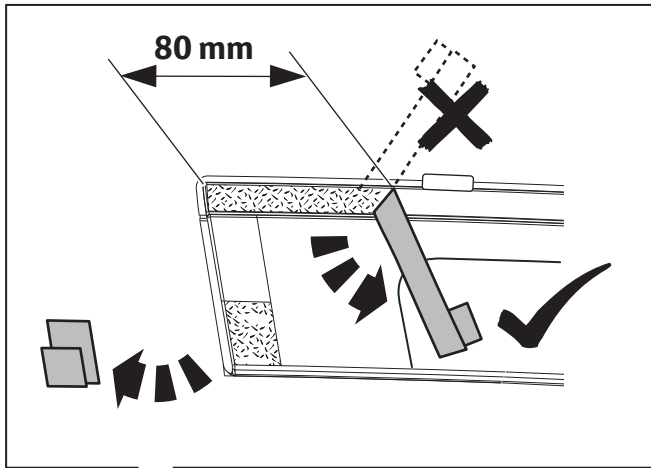


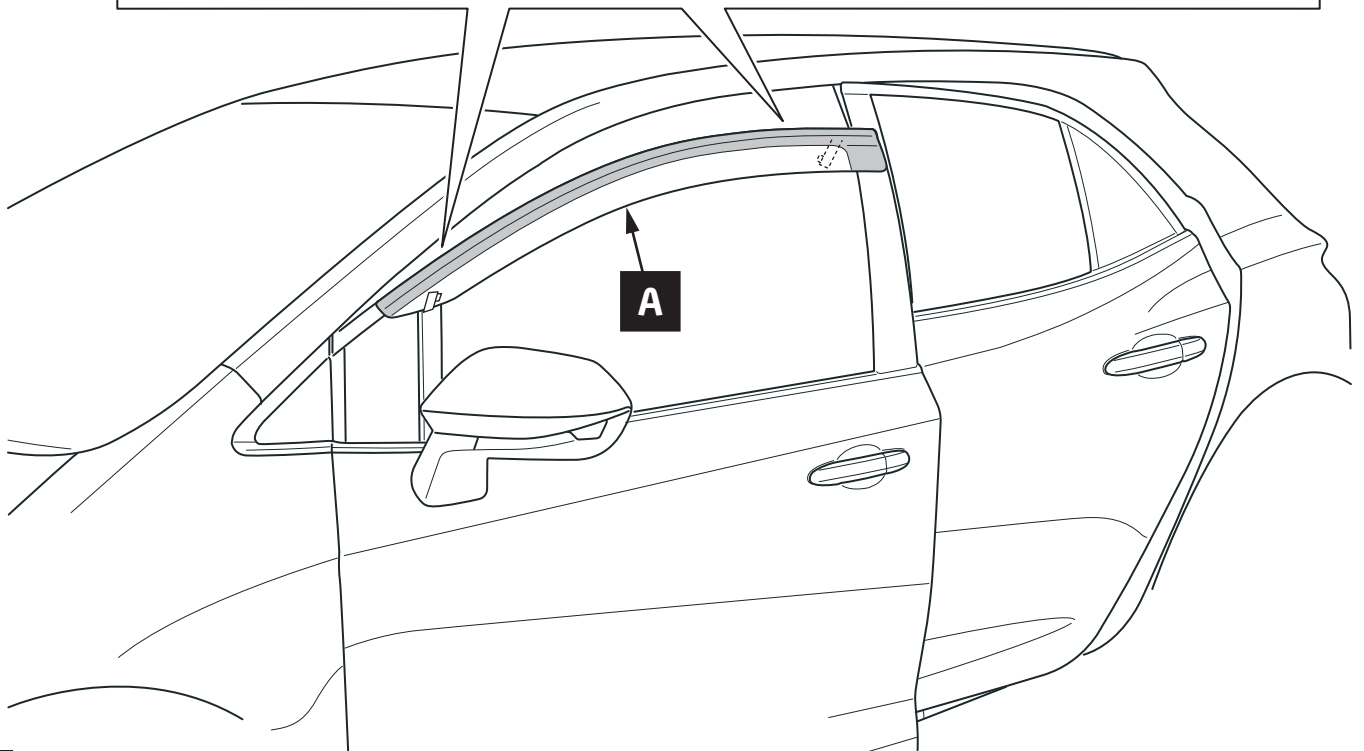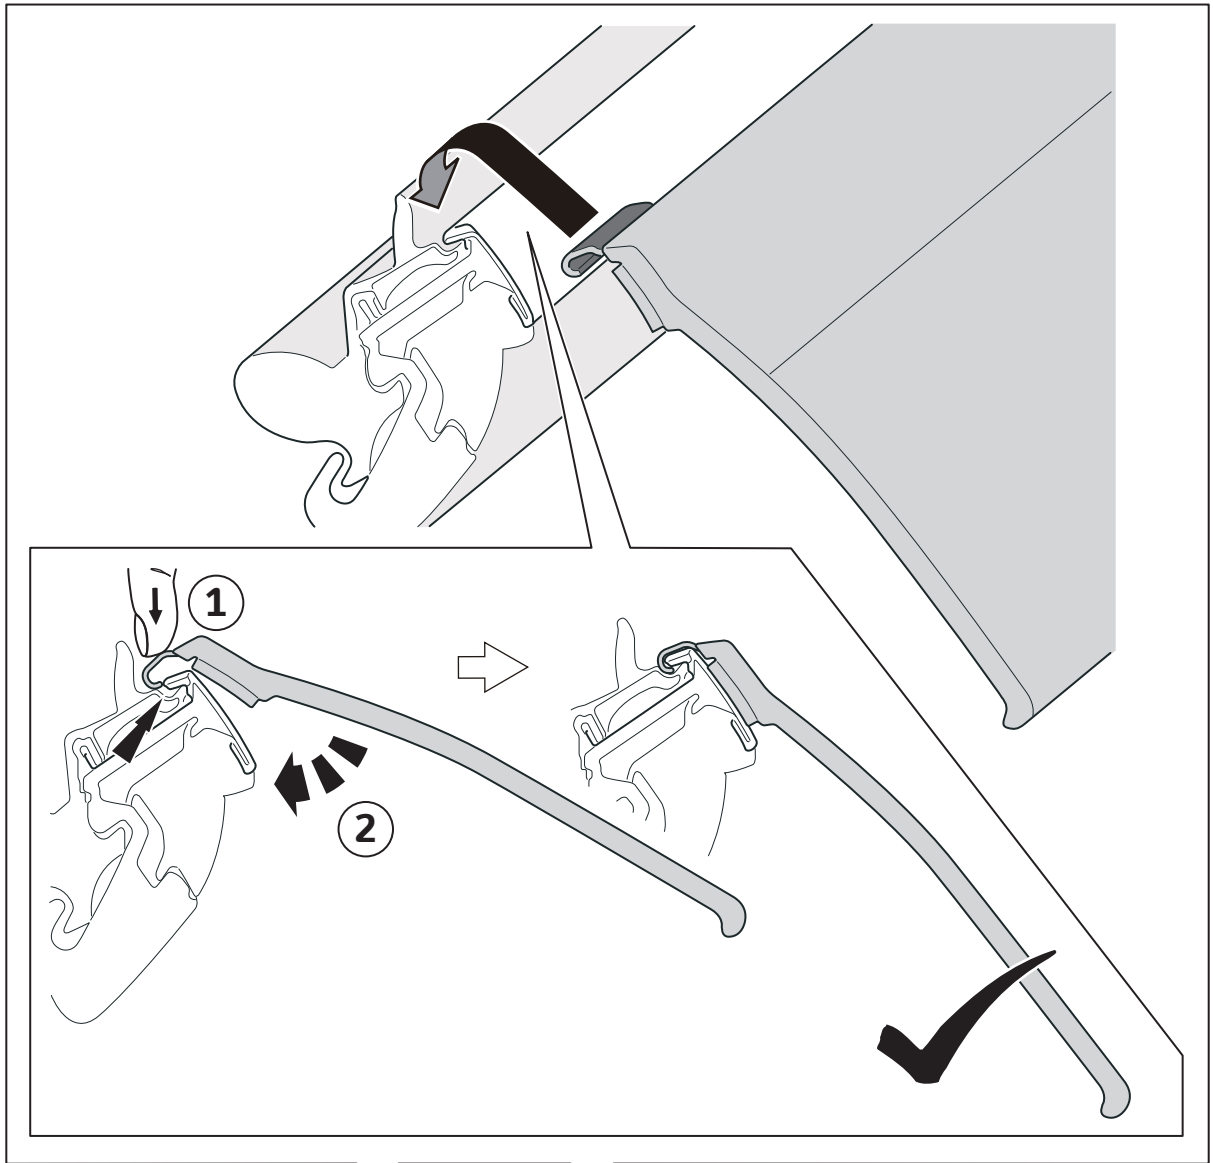


6

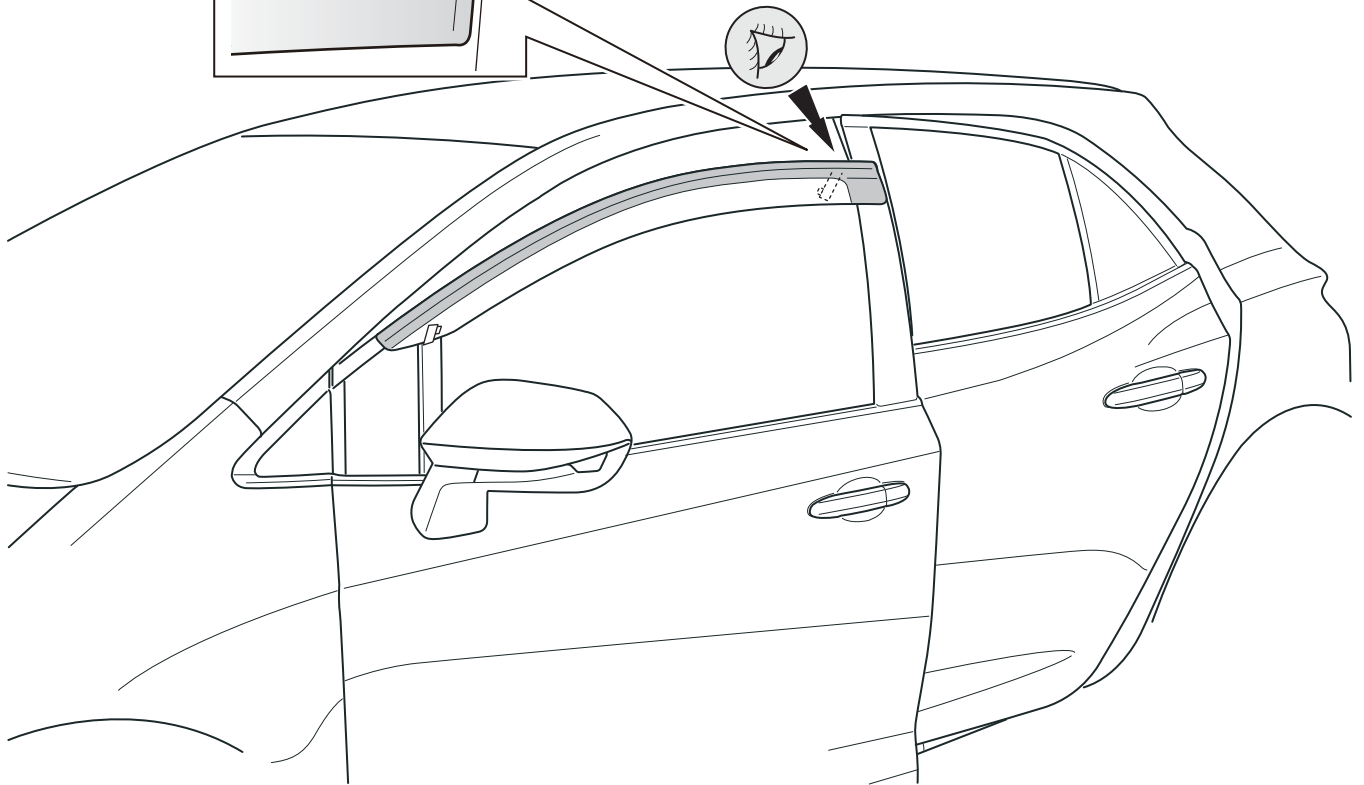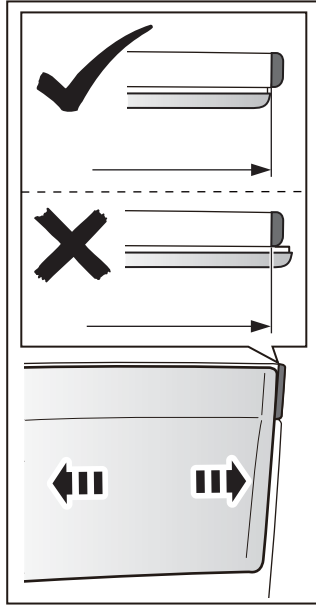



7

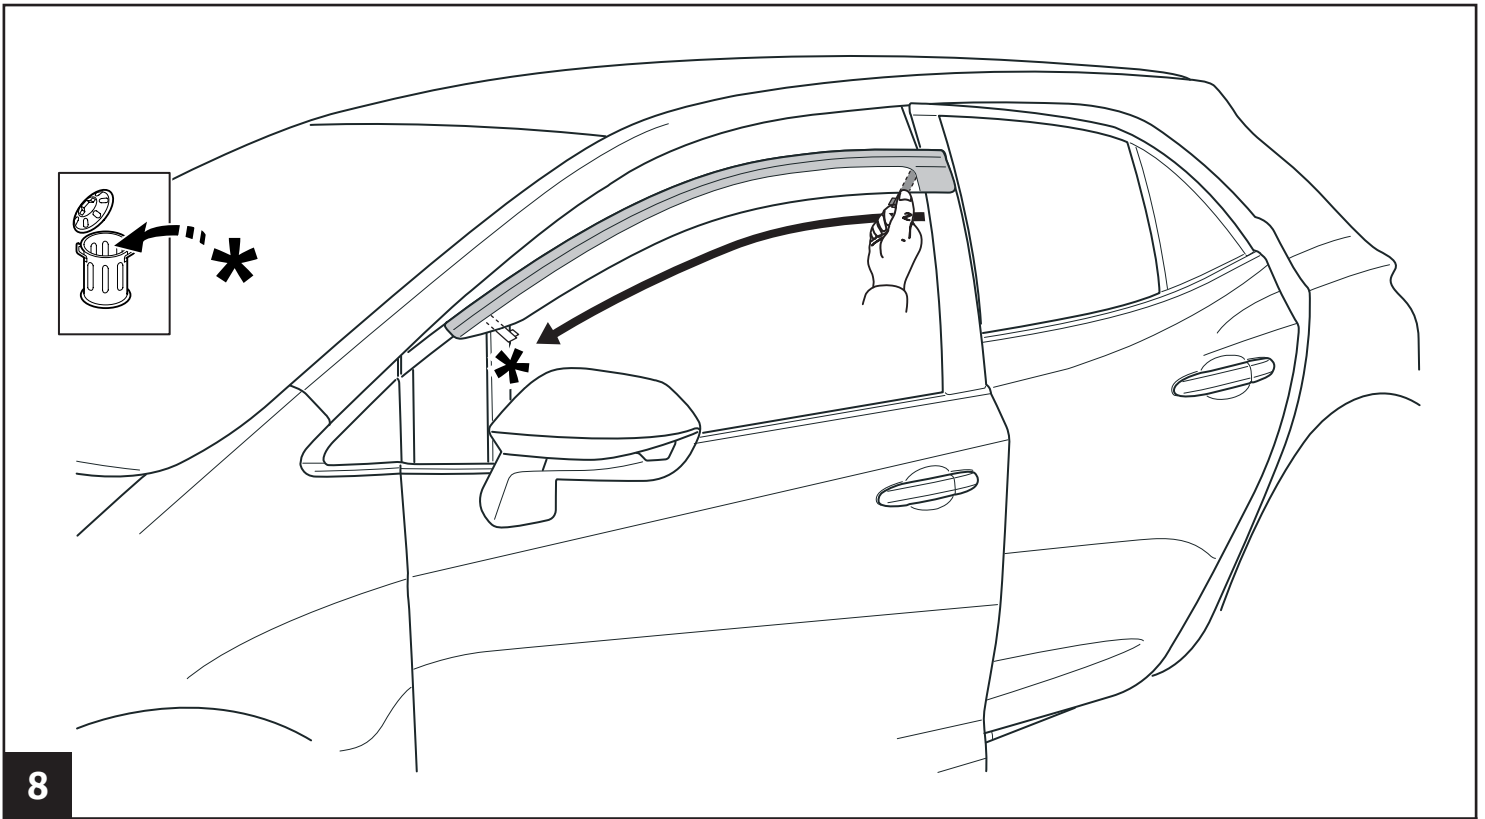




8

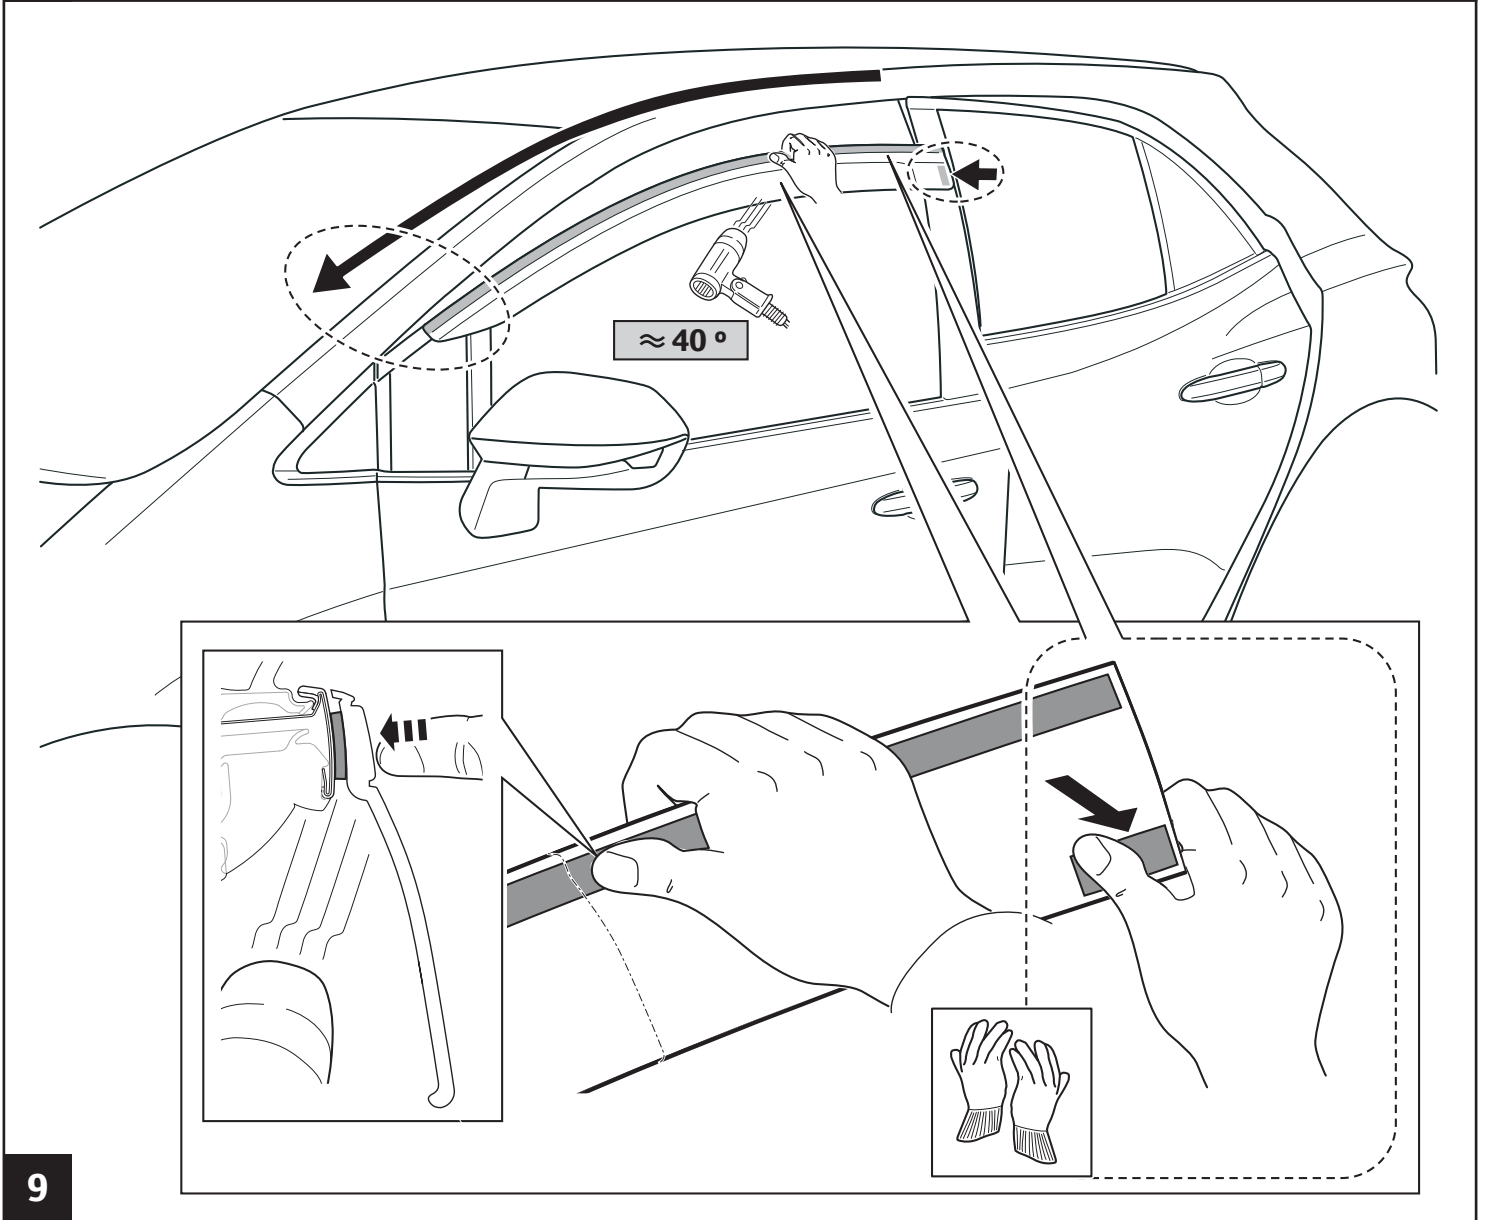

9





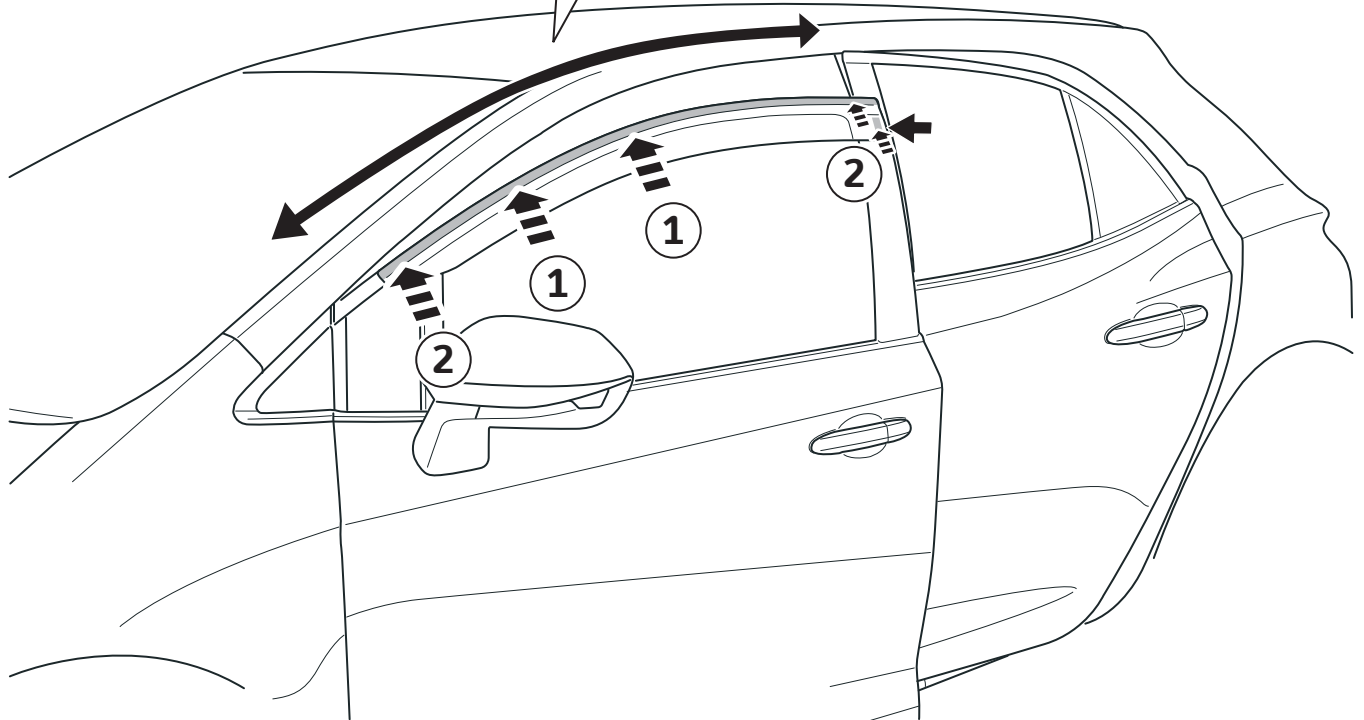
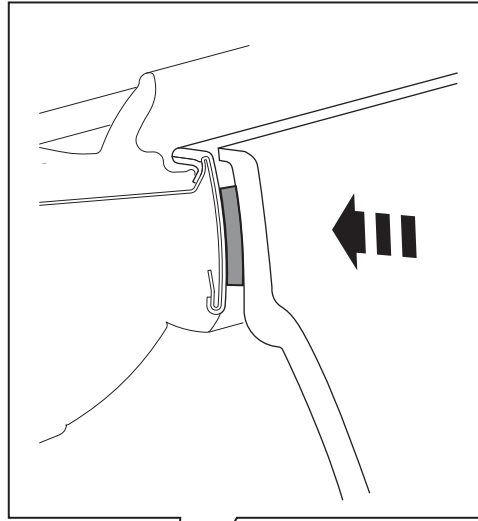



RHS = LHS

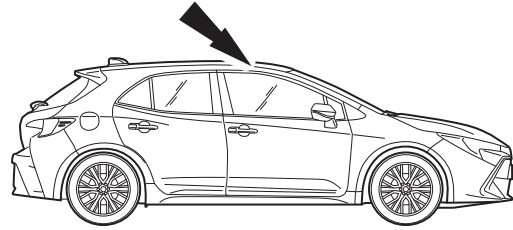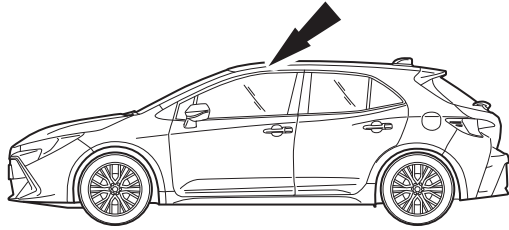

11

INFO

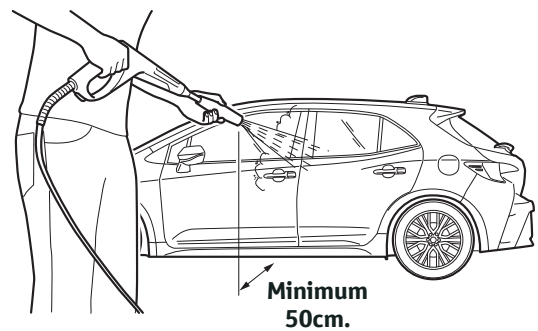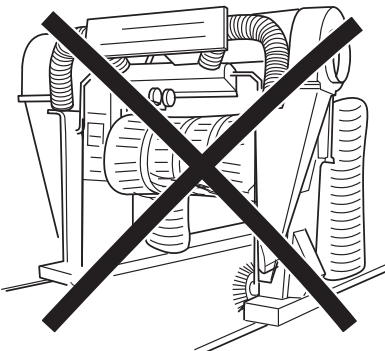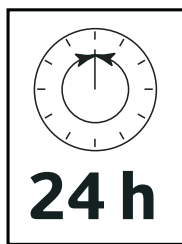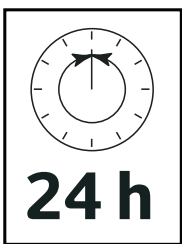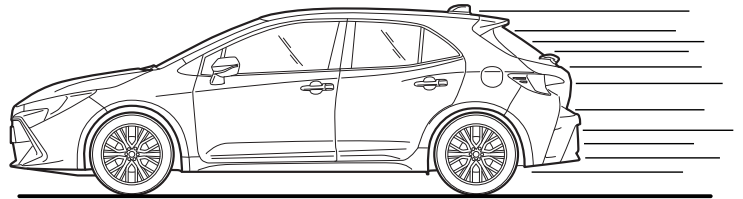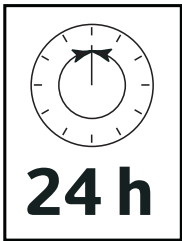

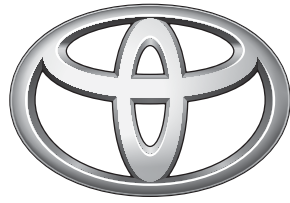

TOYOTA

CHECK SHEET







TOYOTA

Model / Year Corolla (HB, TS & Sedan) **Wind deflectors - front kit normal**
2019/01, 2019/02

VIN n°

ALWAYS A
BETTER WAY

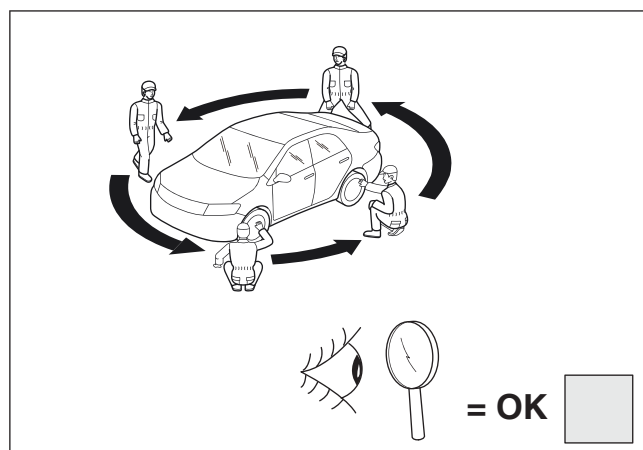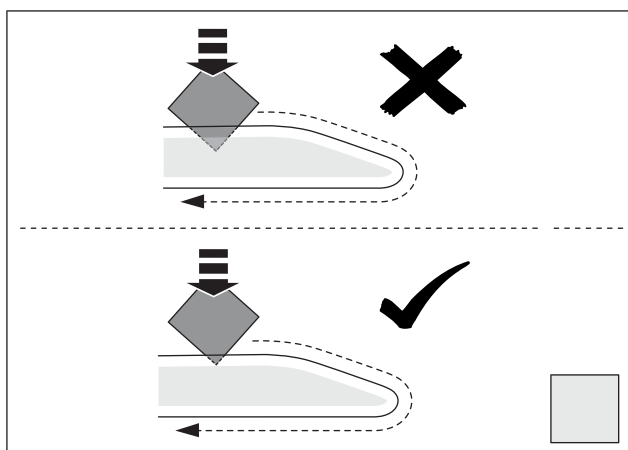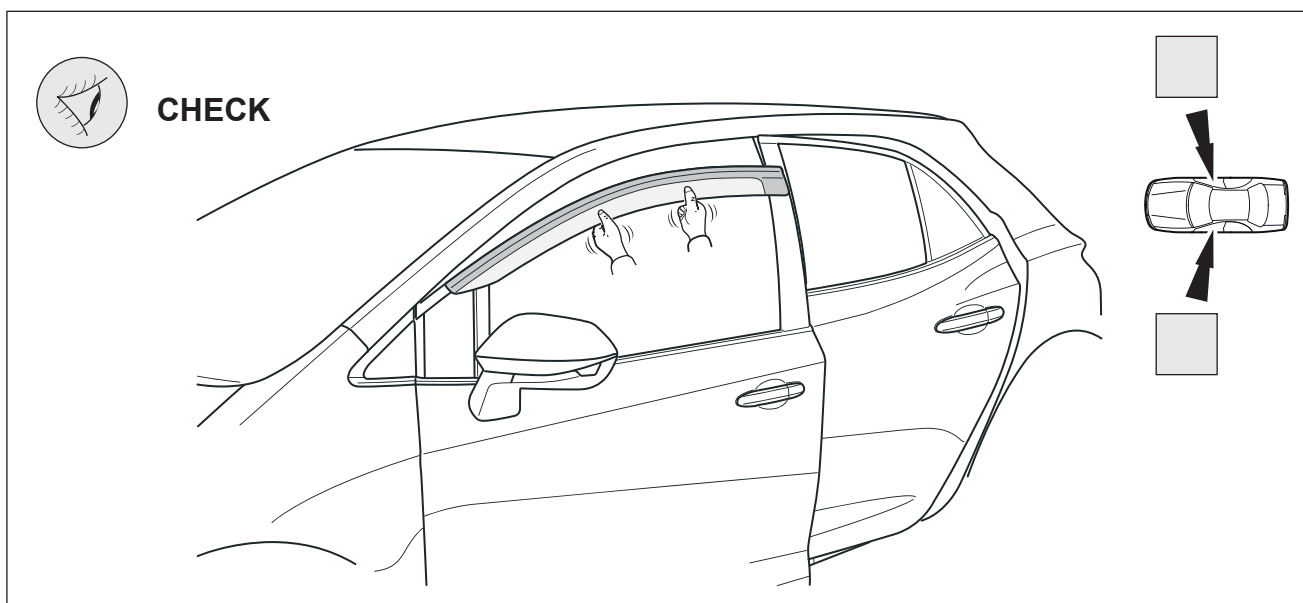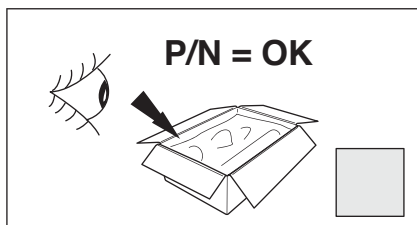

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: