

# Auris HB/Auris TS

## Rear Bumper Protection Film

### Installation Instructions

Model year: As from 2015/05


Vehicle code: \*\*E18\*\*-DW\*\*\*W

Part number: PW178-02019

Manual reference number: AIM 003 476-1

# Revision Record


Rev. No.	Date	Page	Step	Remarks
△ <sub>1</sub>	20.12.2022	3-7	1-12	Updated to latest standards.
△ <sub>1</sub>	20.12.2022	1, 3	Cover, Kit	Part number updated

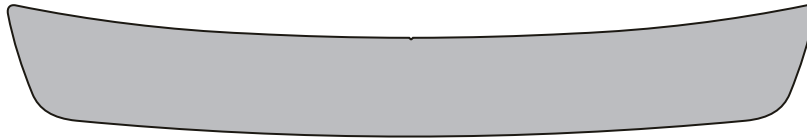



**A**

x1


**OVERVIEW**

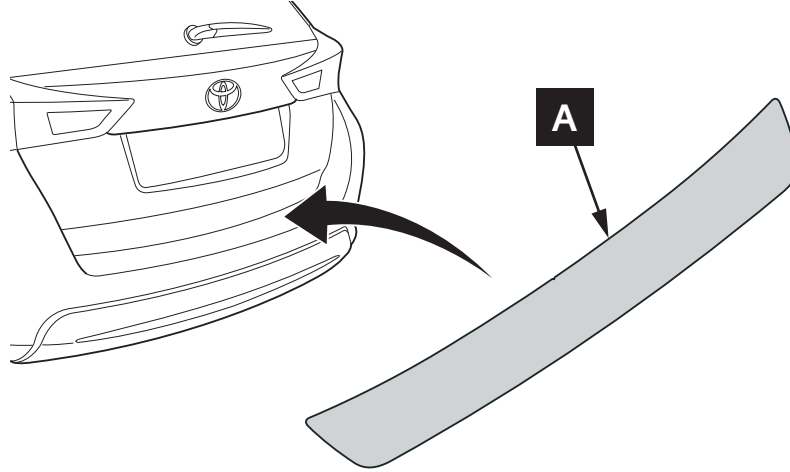

PZ438-00030-90




3m Gold Squeegee + felt sticker Qty 2  
**NOT INCLUDED**

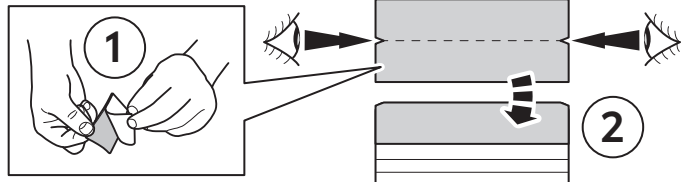

**TOOLS**



**TEMPERATURE SENSOR**

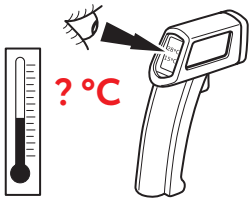

**CONSUMABLES**

**CLEANER / DEGREASER SPRAY**



**AIM 003 516-\***



**VINYL APPLICATION FLUID**



**PW18A-0H000**


**SQUEEGEE**





**PZ438-00030-90**

**For Symbols Explanation SCAN HERE**






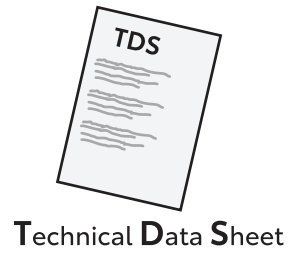







10°C - 28°C

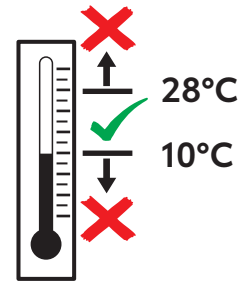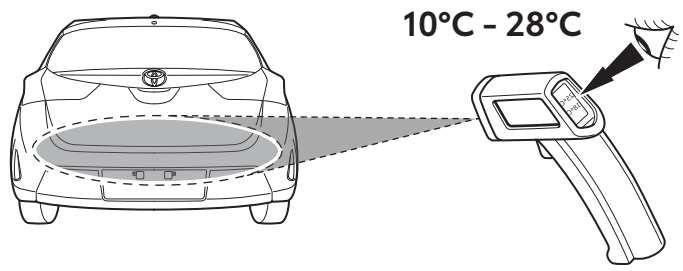


A

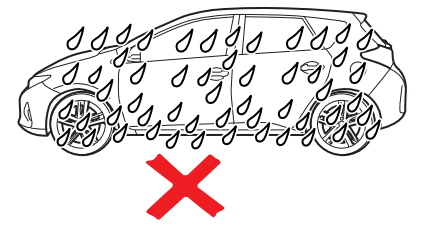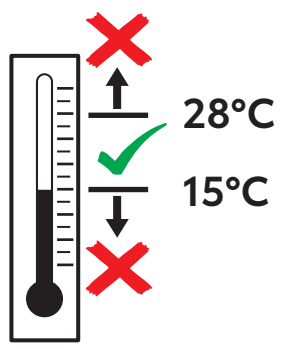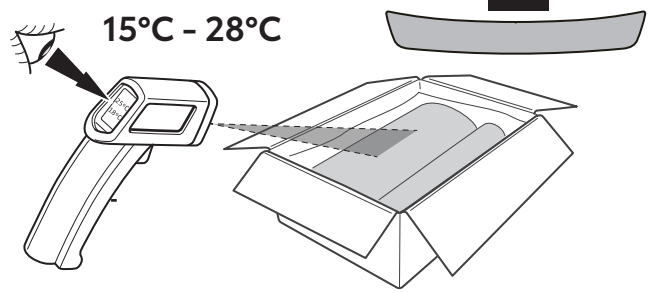


# INSTALLATION INSTRUCTIONS

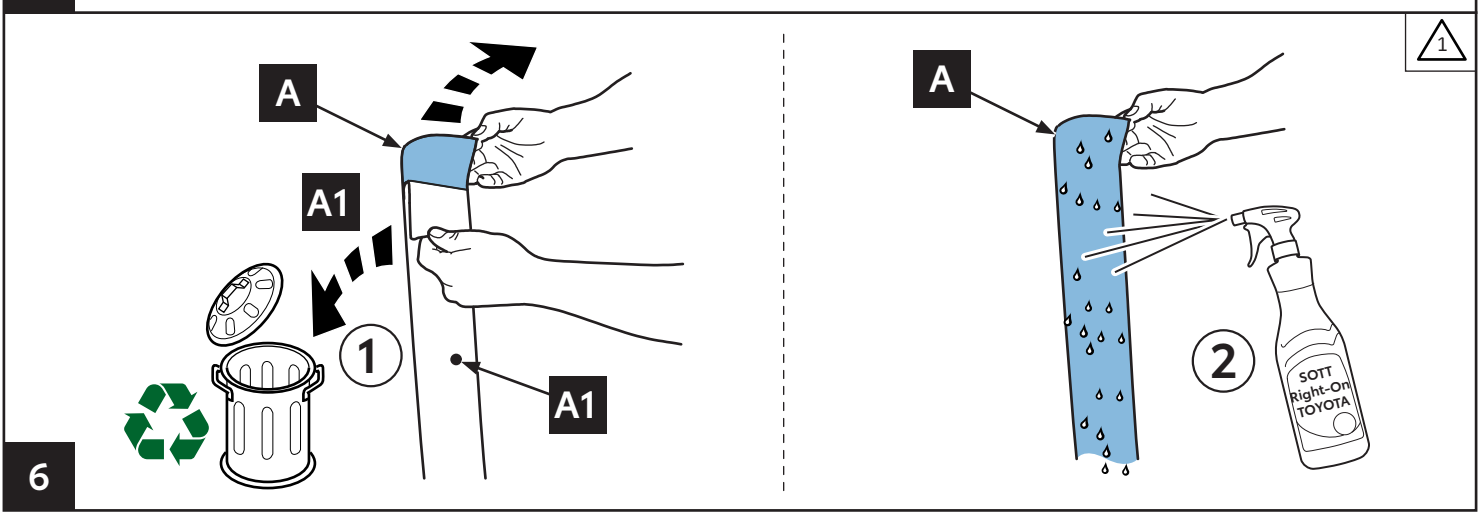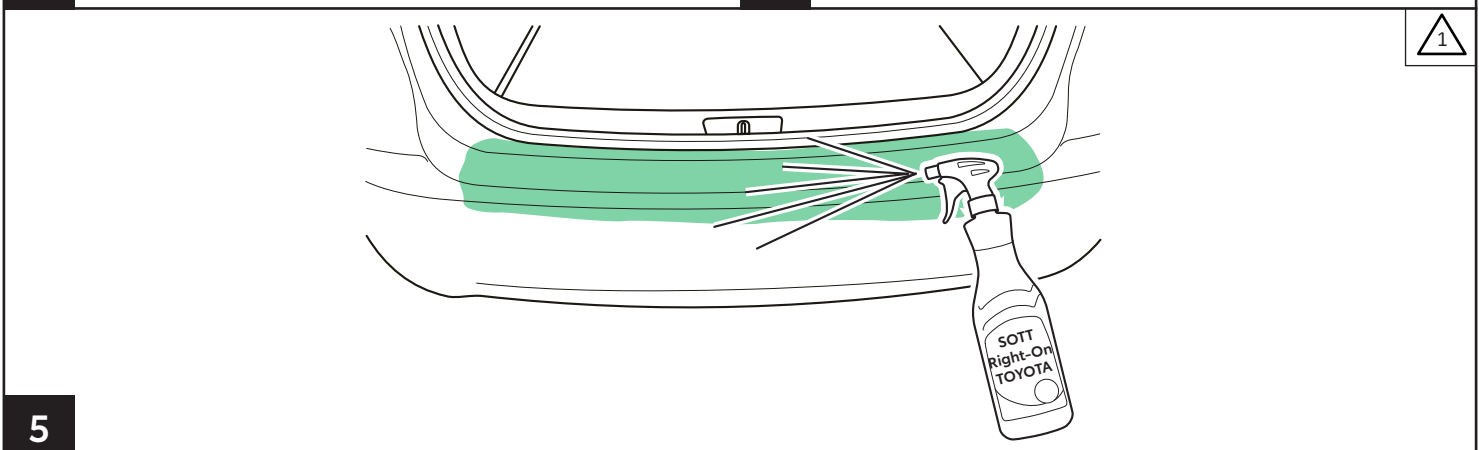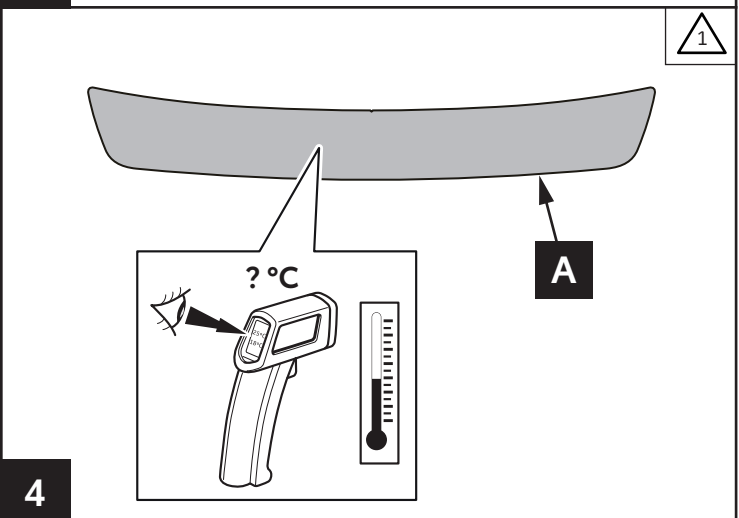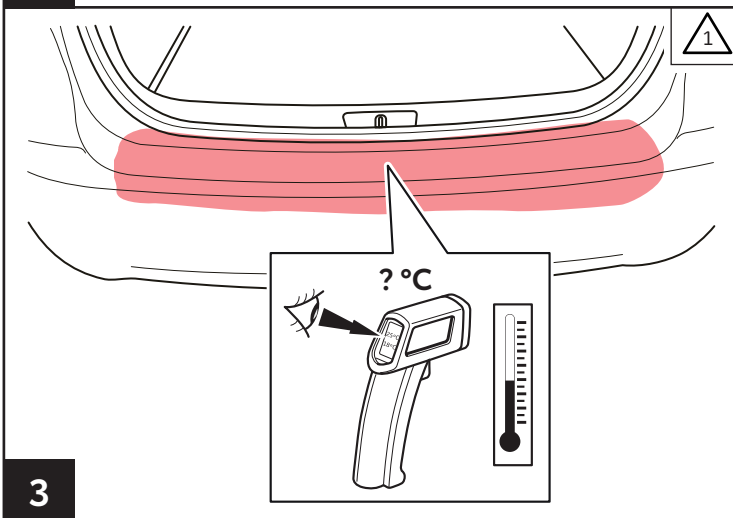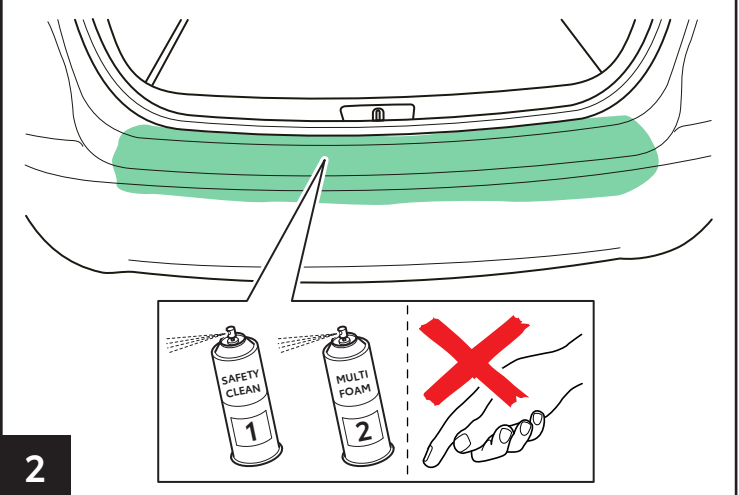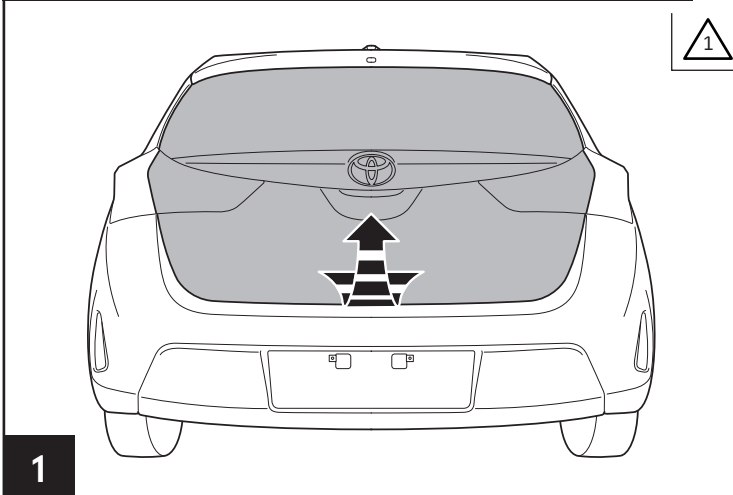


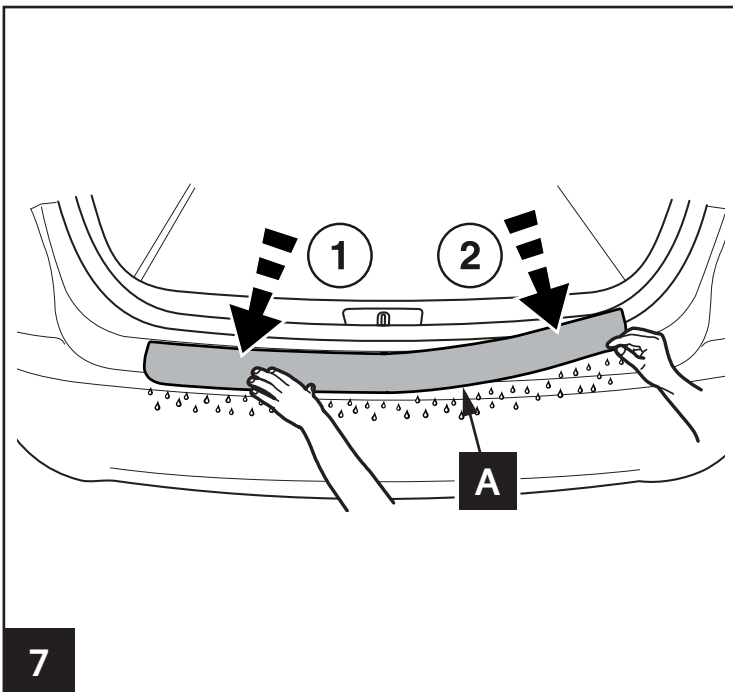


7

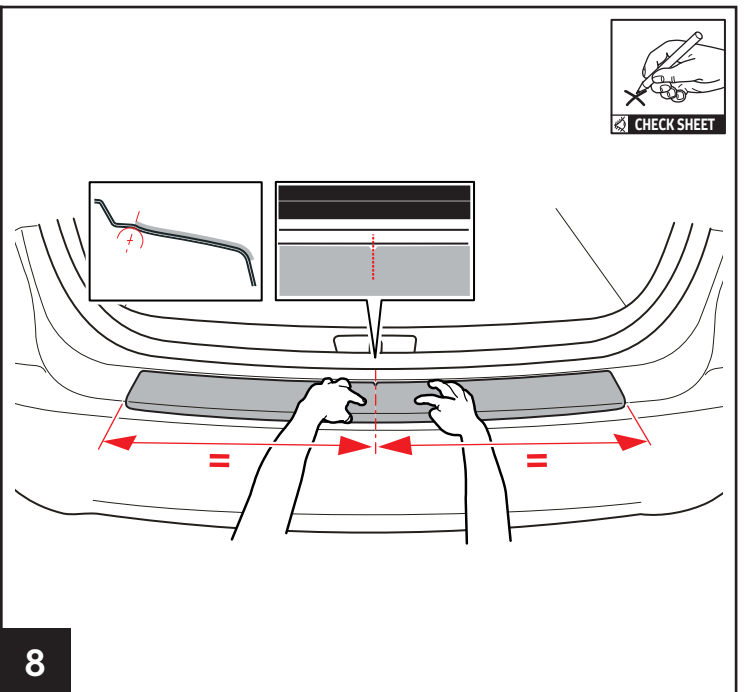


8

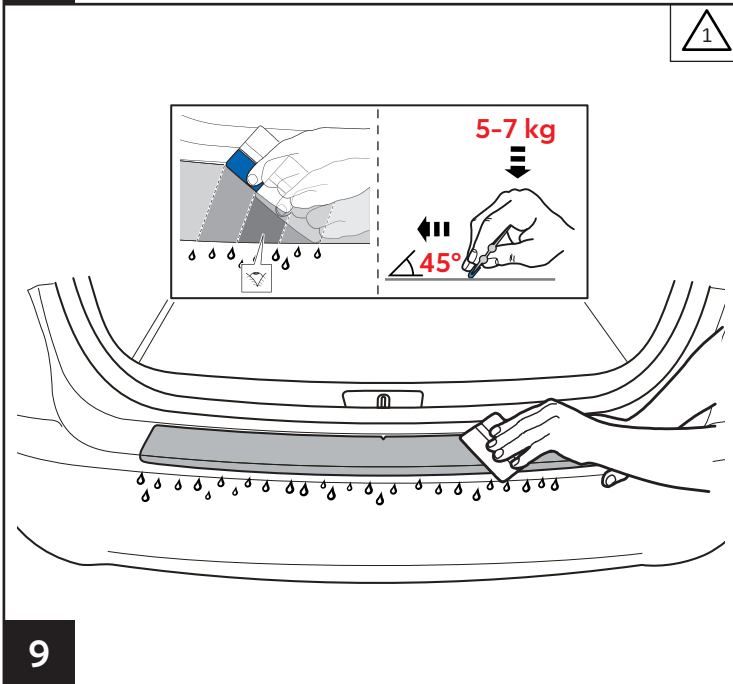


9

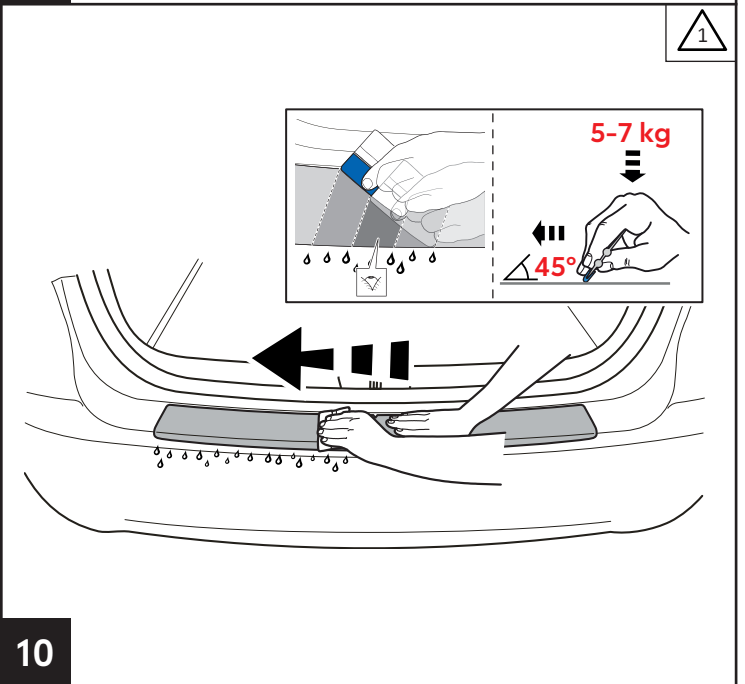







10

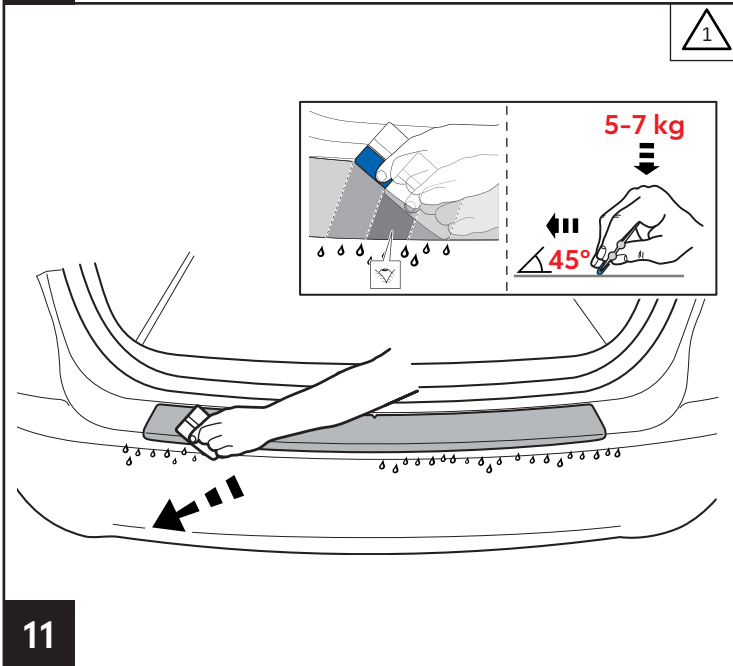


11

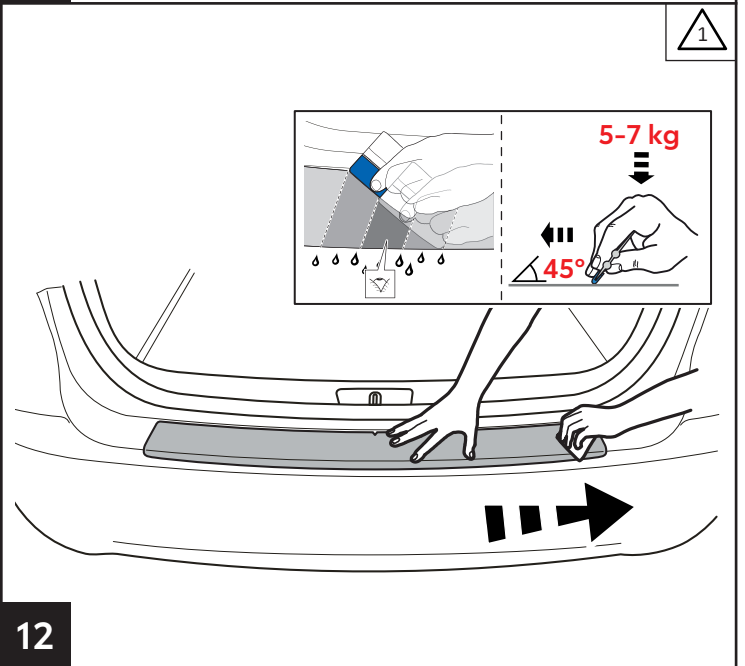

12

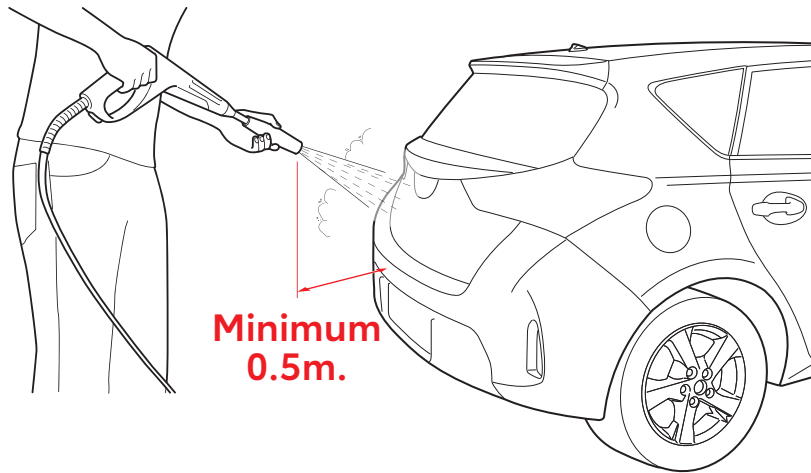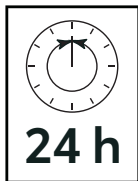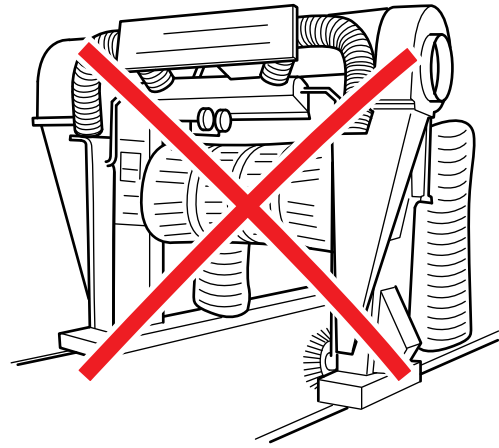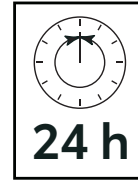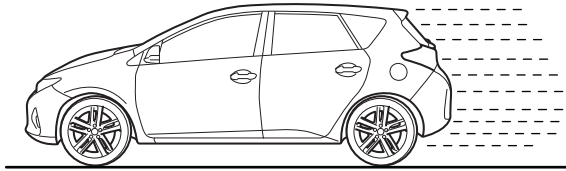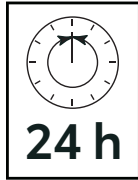

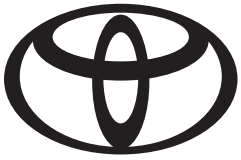

# CHECK SHEET

Page 1 of 1

Model/Year


Auris HB/TS  
As from 2015/05

Rear Bumper Protection Film

VINn°

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □


## DURING INSTALLATION

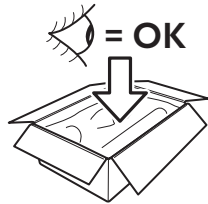

P/N = OK

1



□

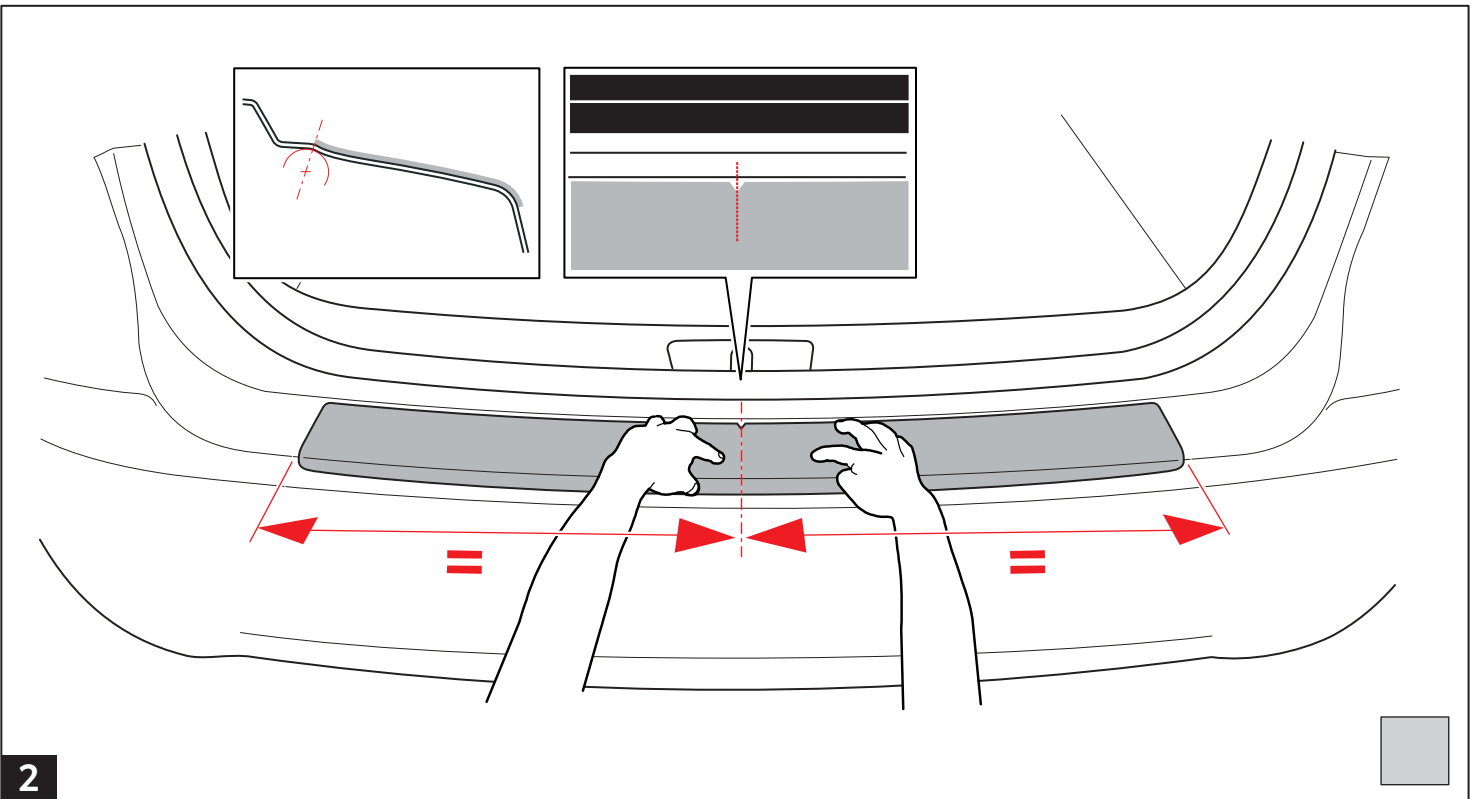

2

□

## AFTER INSTALLATION

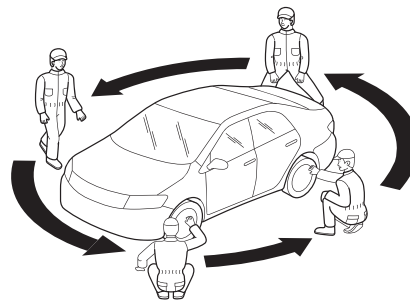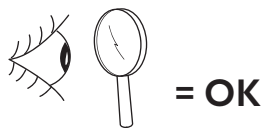

1

□

Installation Date:

.. / .. / .....

Technician Name & Signature:

Stamp: