



# Camry

Front & rear set mud flaps


Installation instructions

Model year: 2011/09  
Vehicle code: \*\*V5\*\*-\*E\*\*\*\*  
Part number: PZQ41-33030


Manual reference number: AIM 002 615-2



# Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted
1	13.08.12	1		X		
1	13.08.12	8	11	X		
1	13.08.12	9	15	X		
2	07.12.12	1		X		



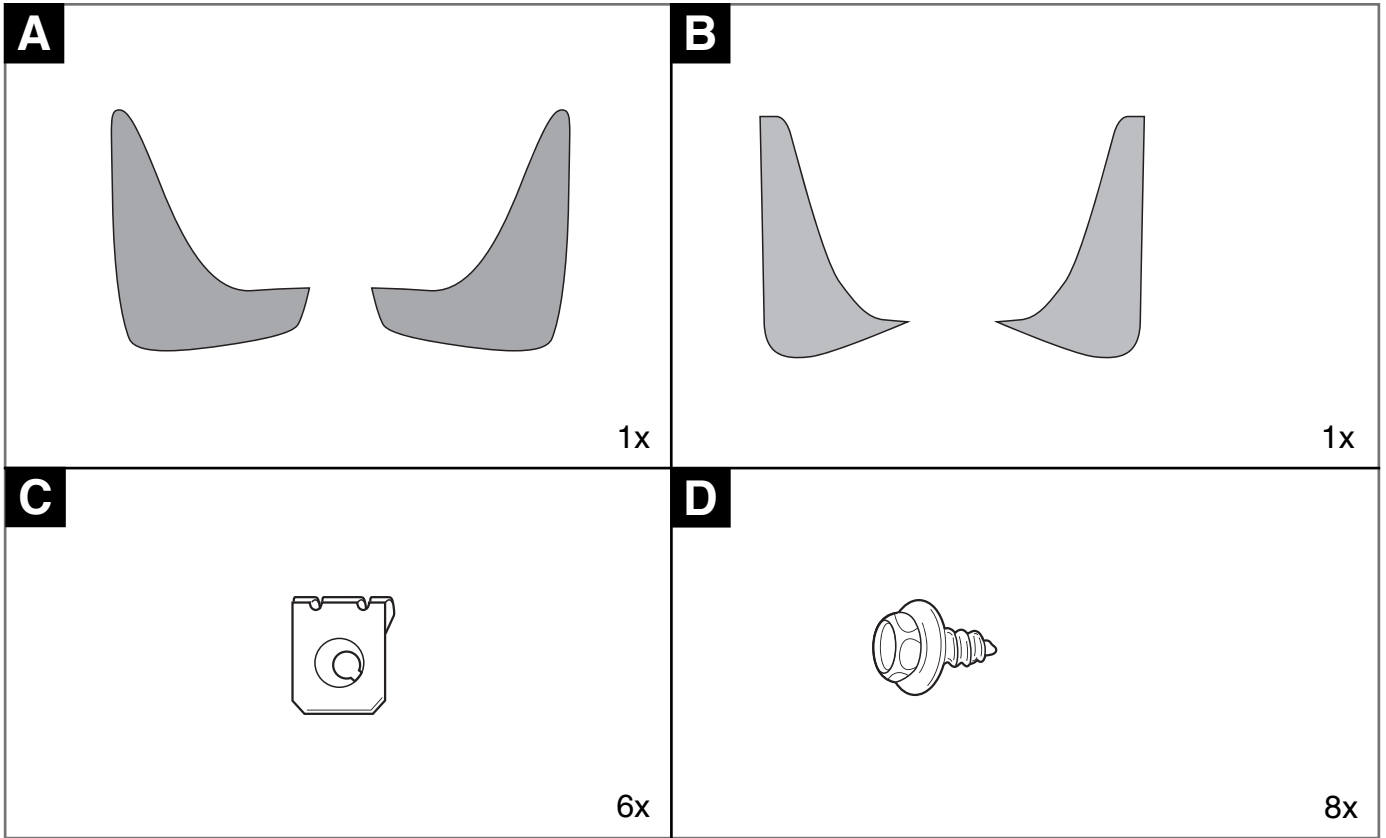


86705-YY030


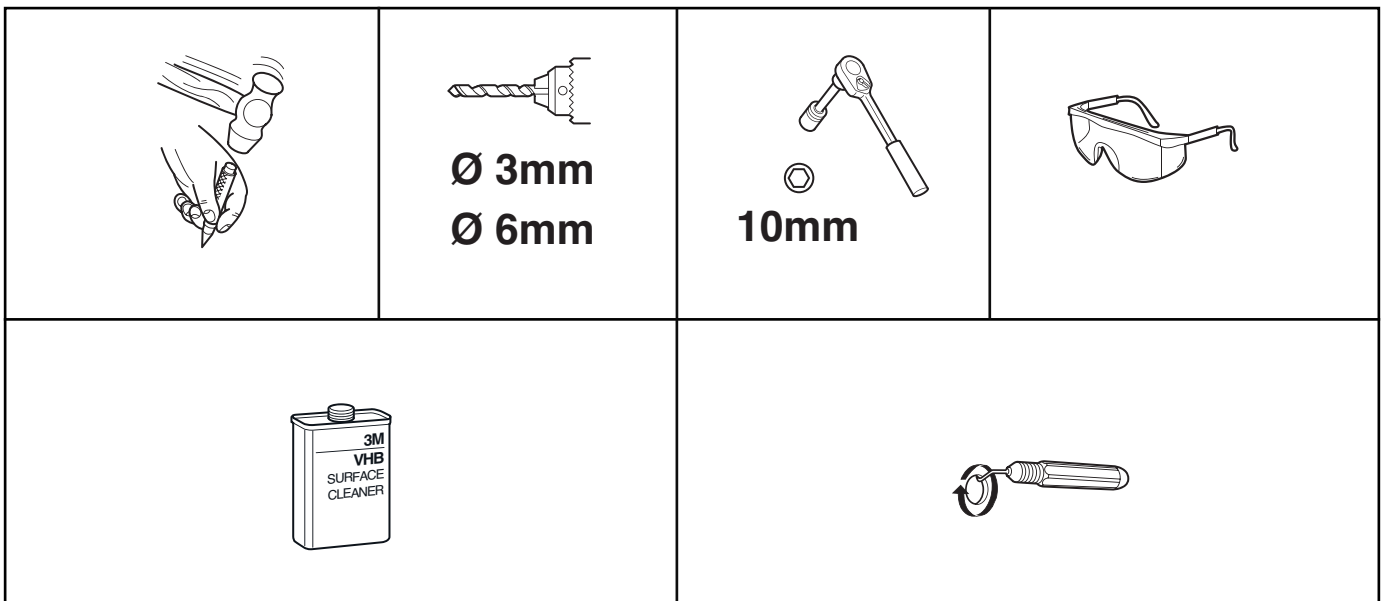


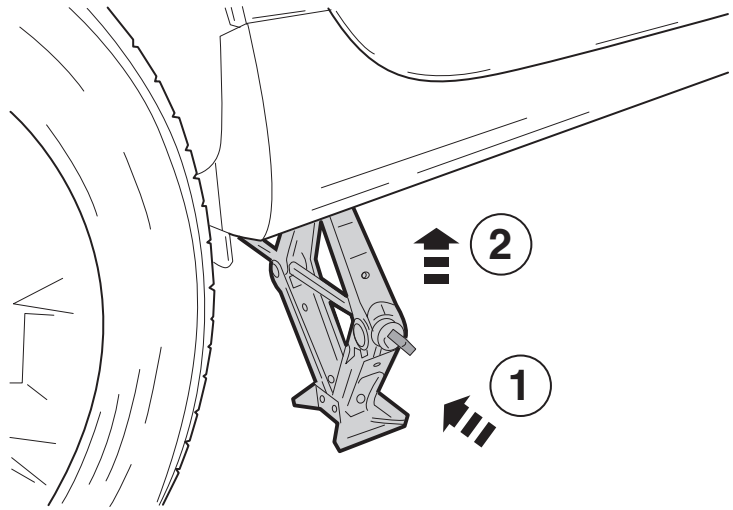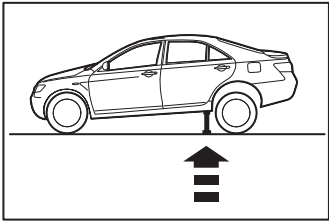



1

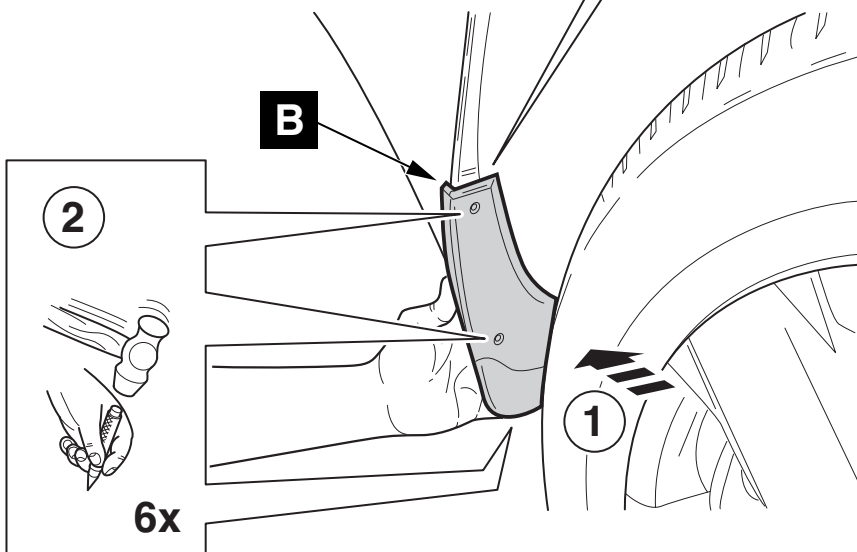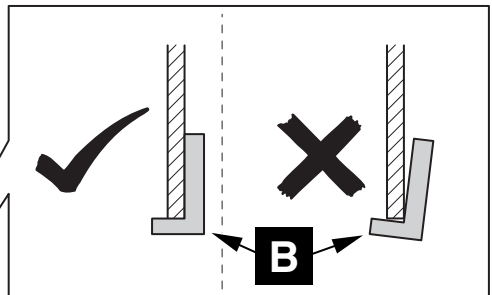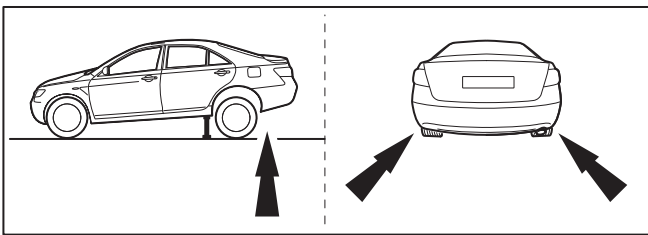


2

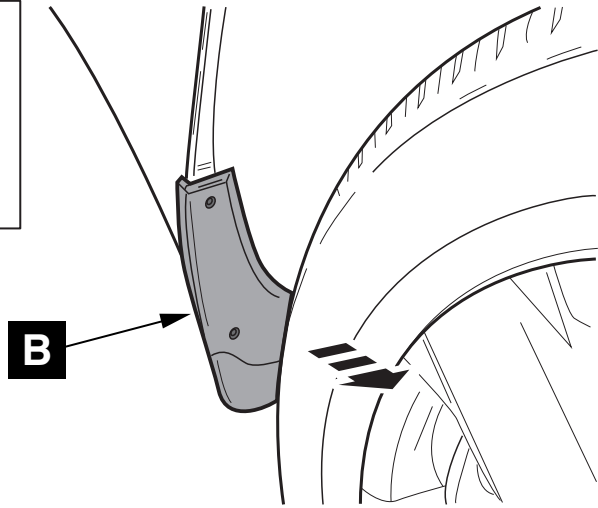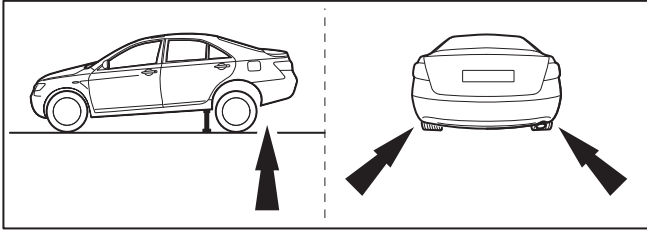

**3**

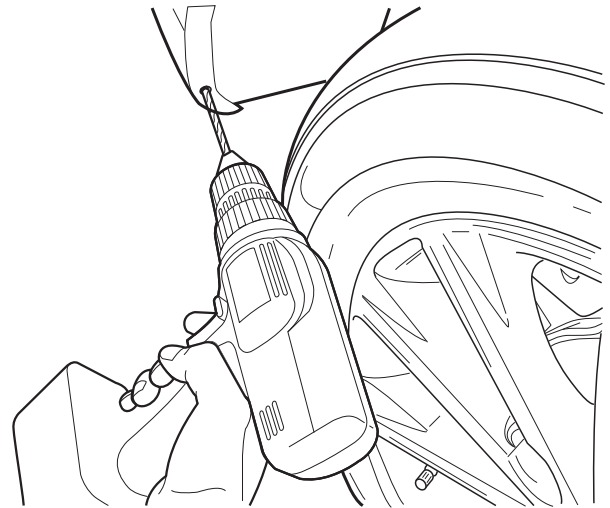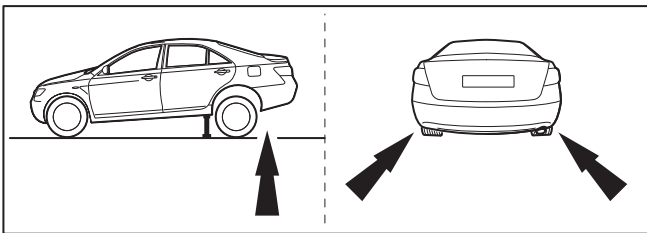


1



Ø 3mm

6x


2



Ø 6mm



6x

3



6x

**4**



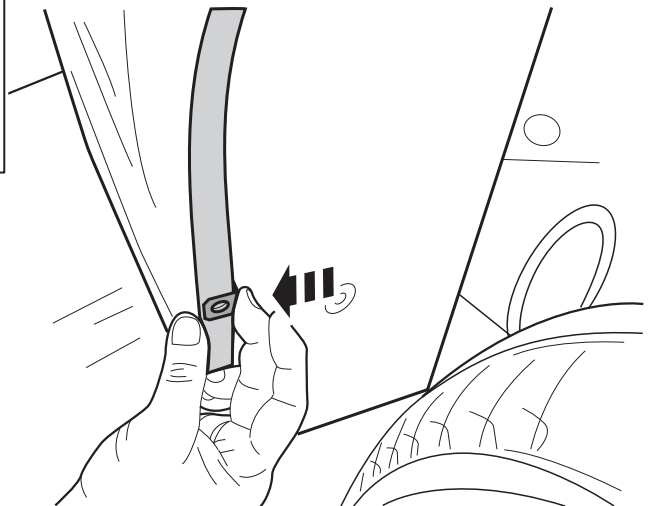
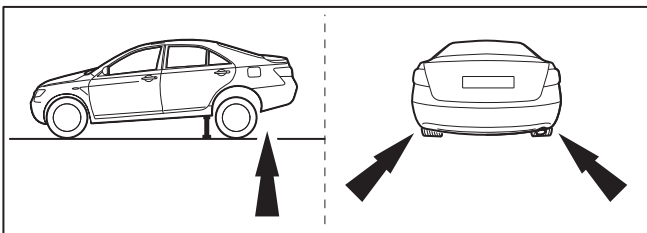


**C**






6x




**5**

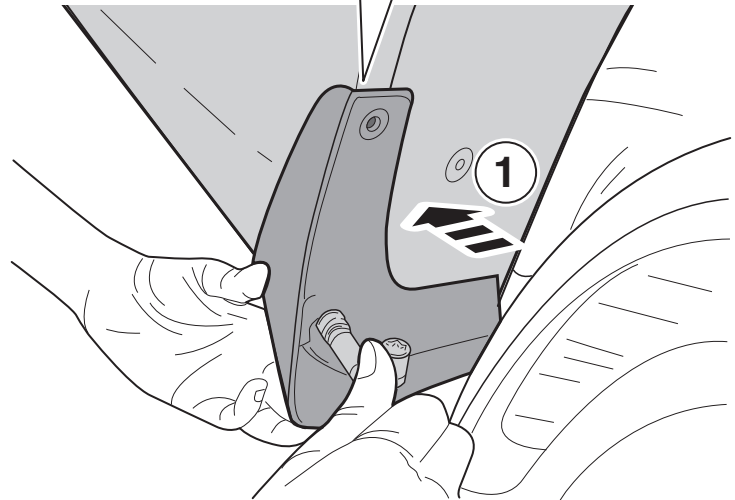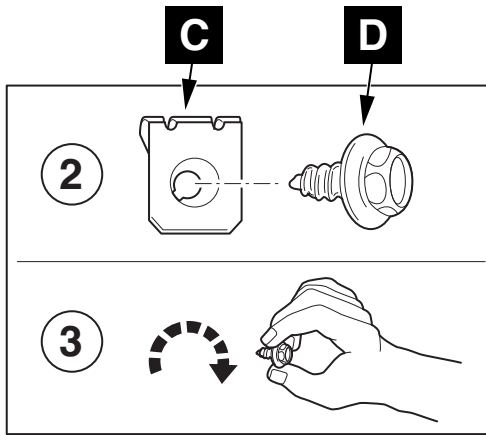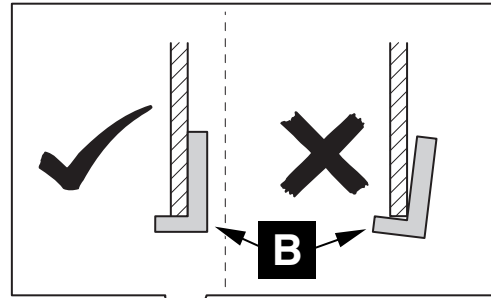
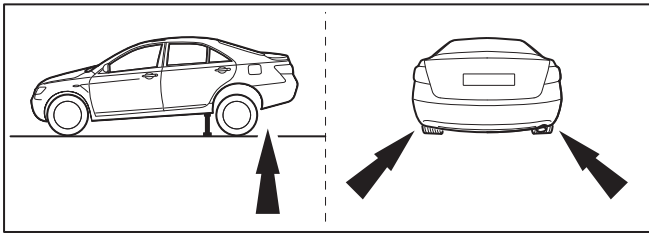


6

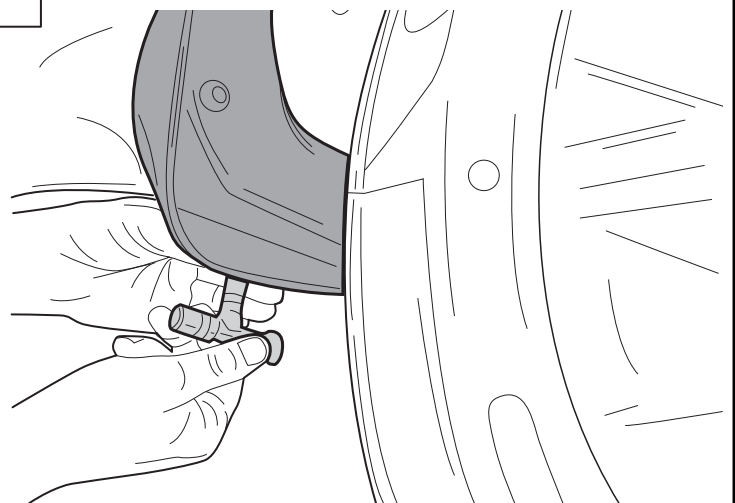
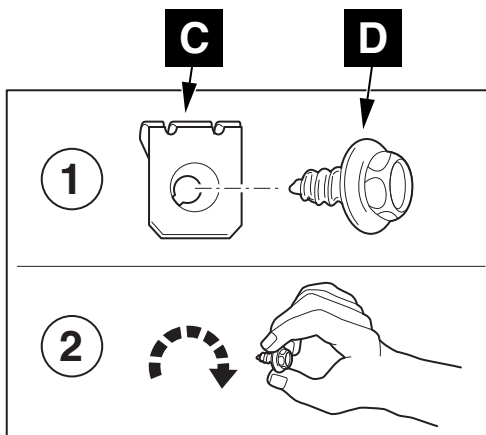
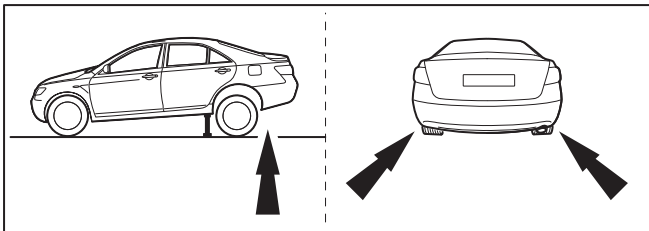


7

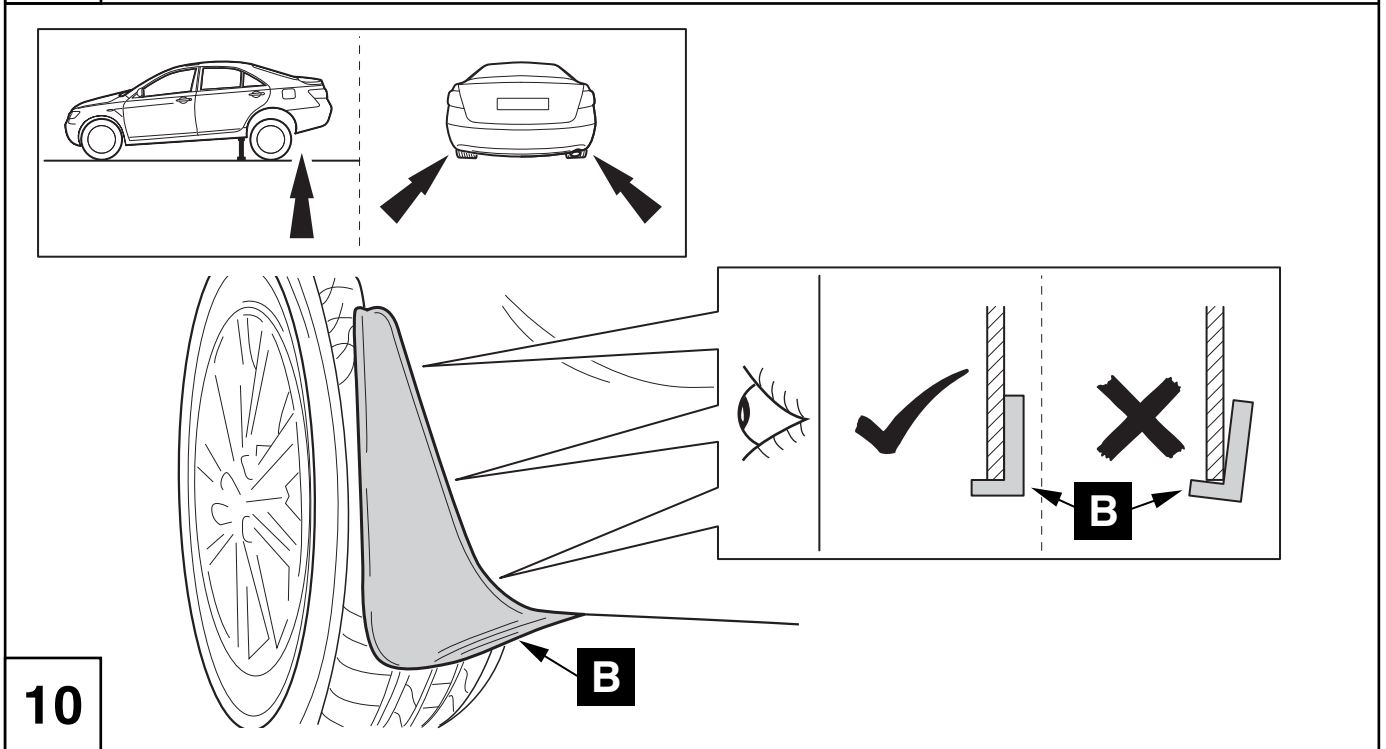
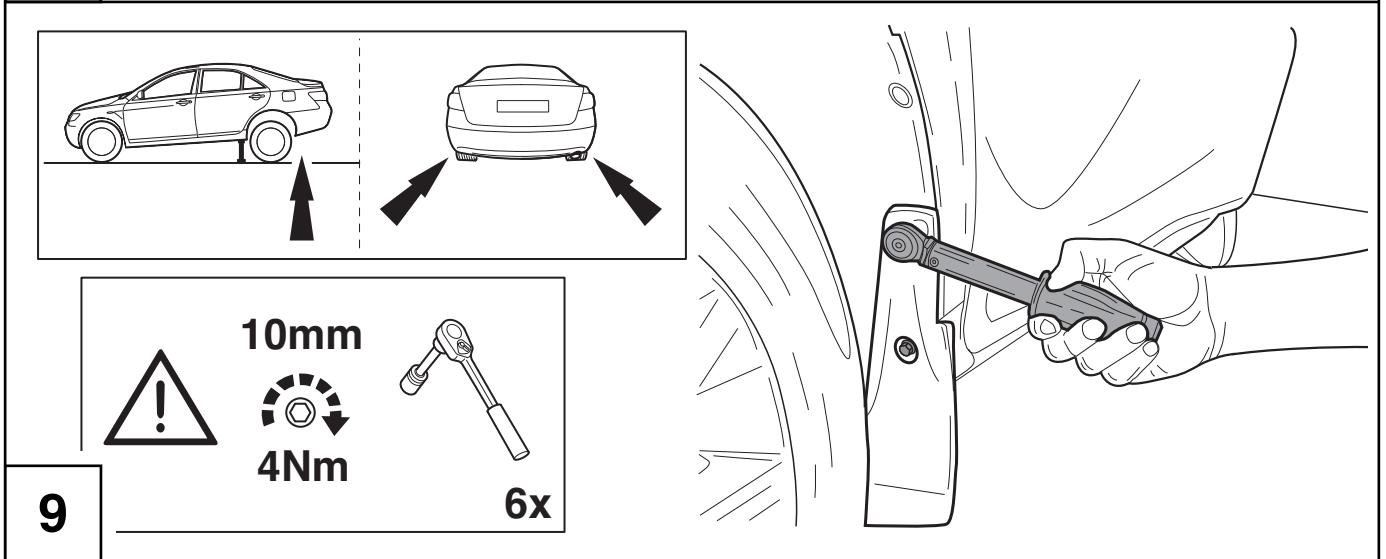
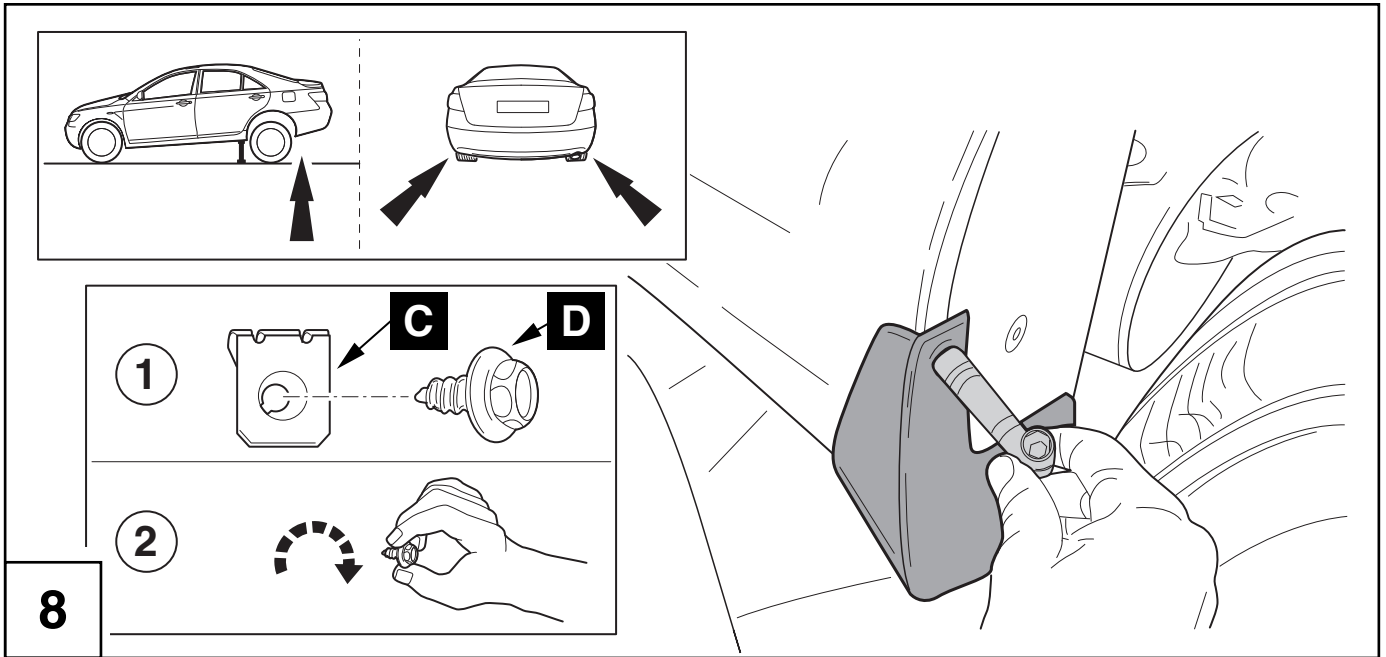


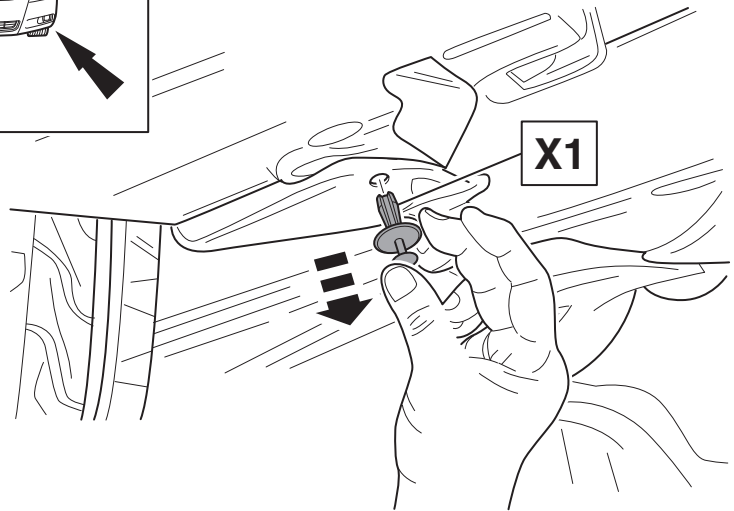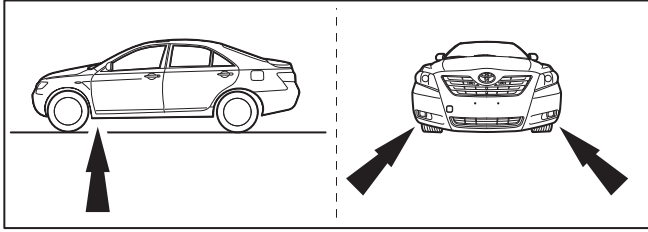

11

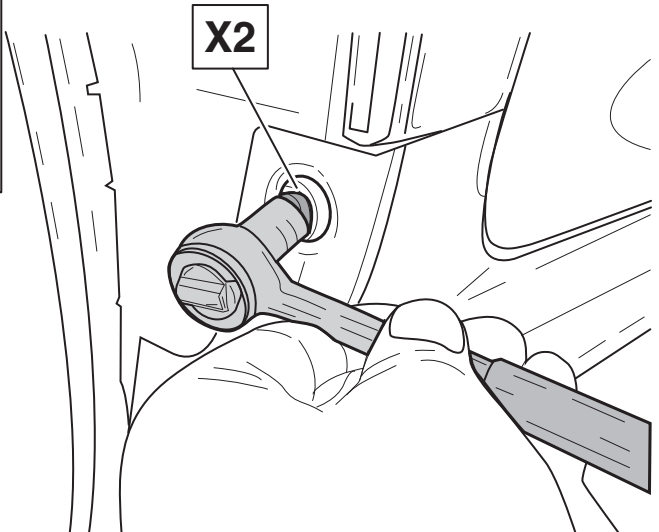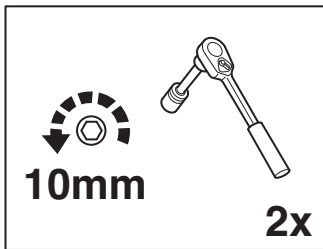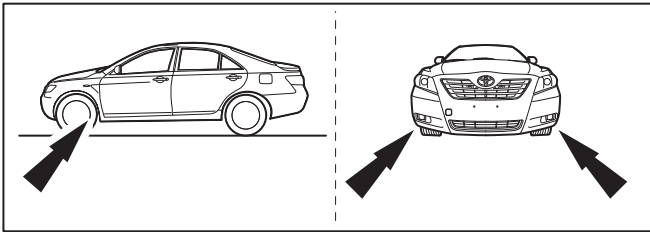


12

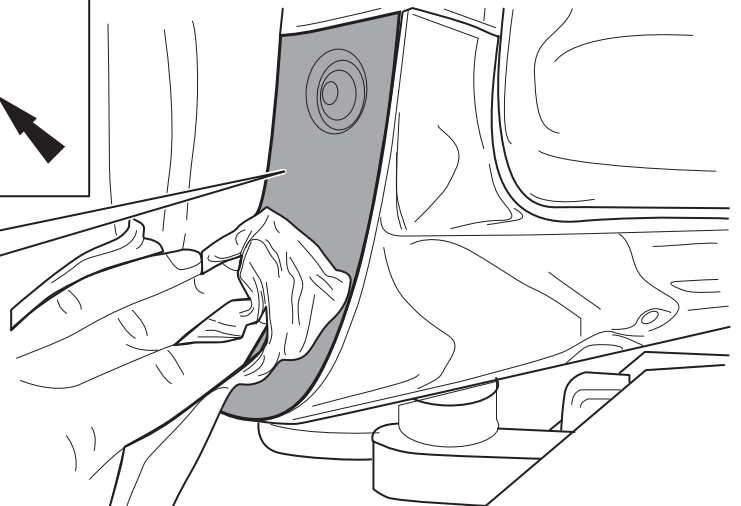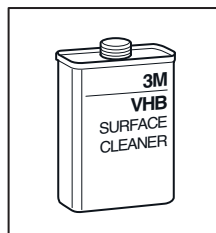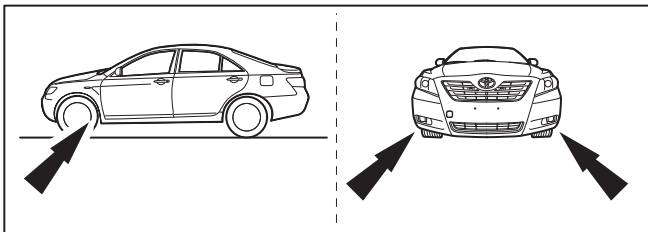


13




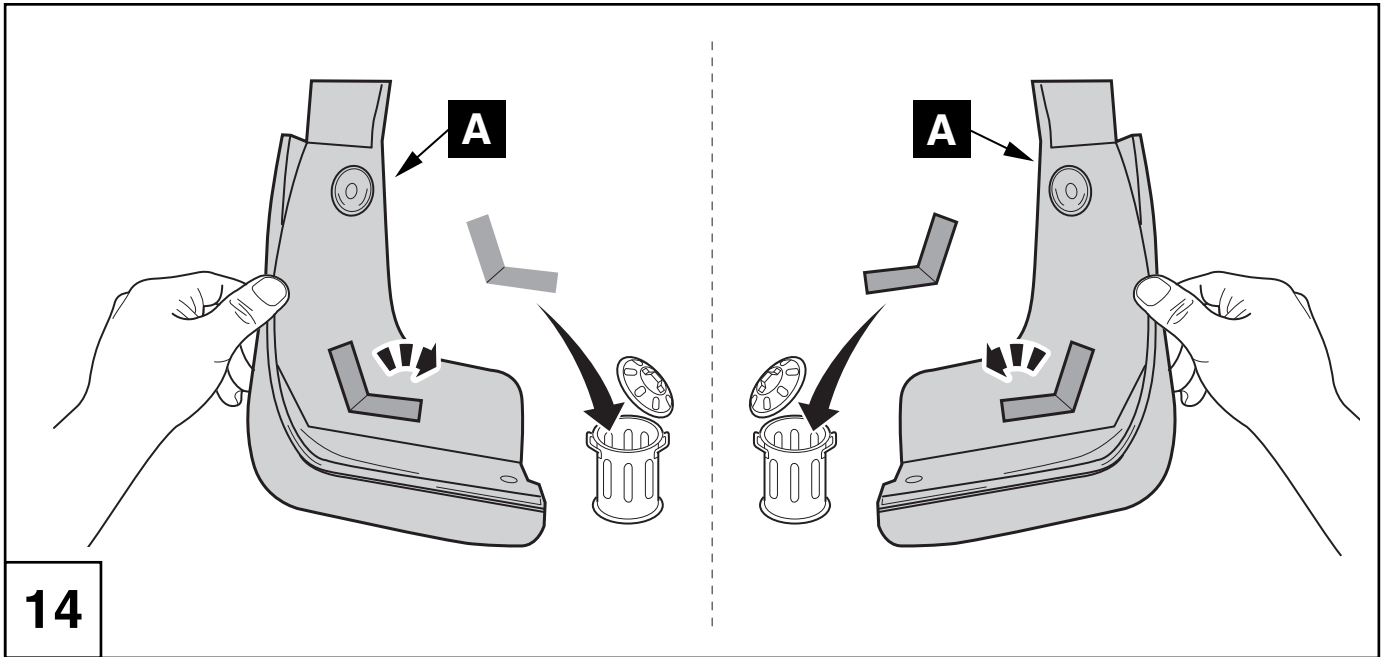




14

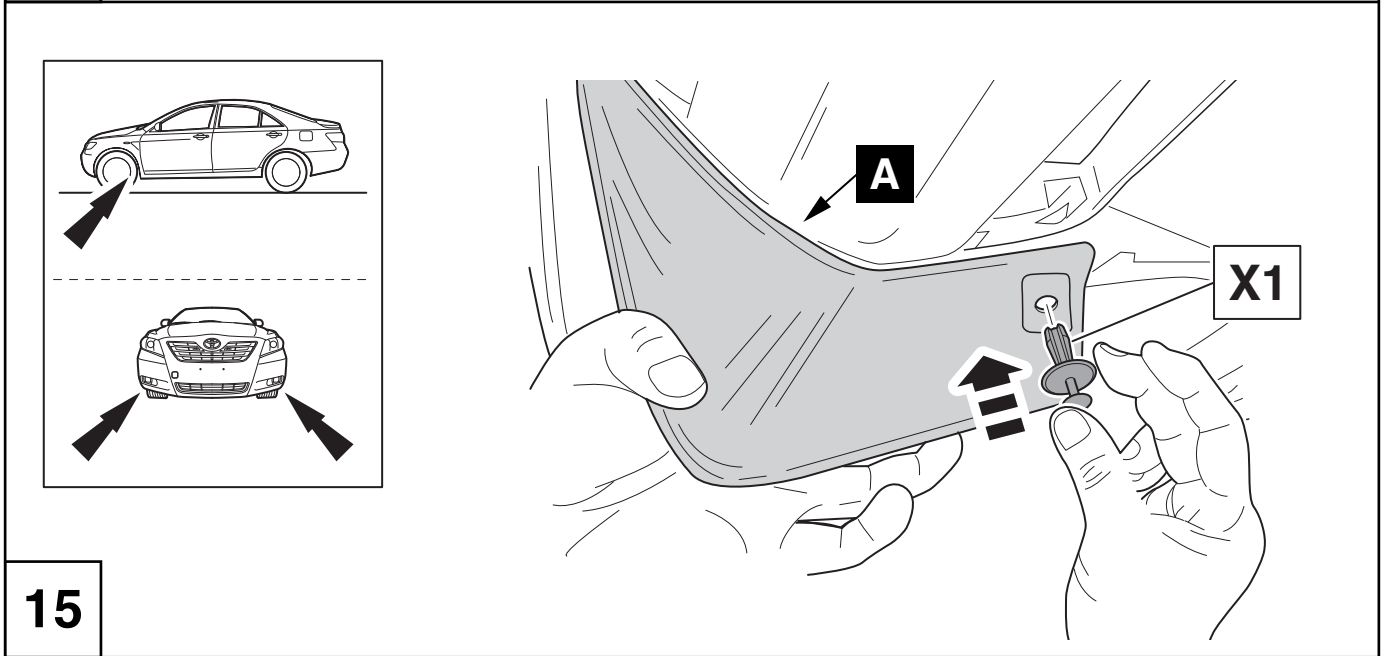



15

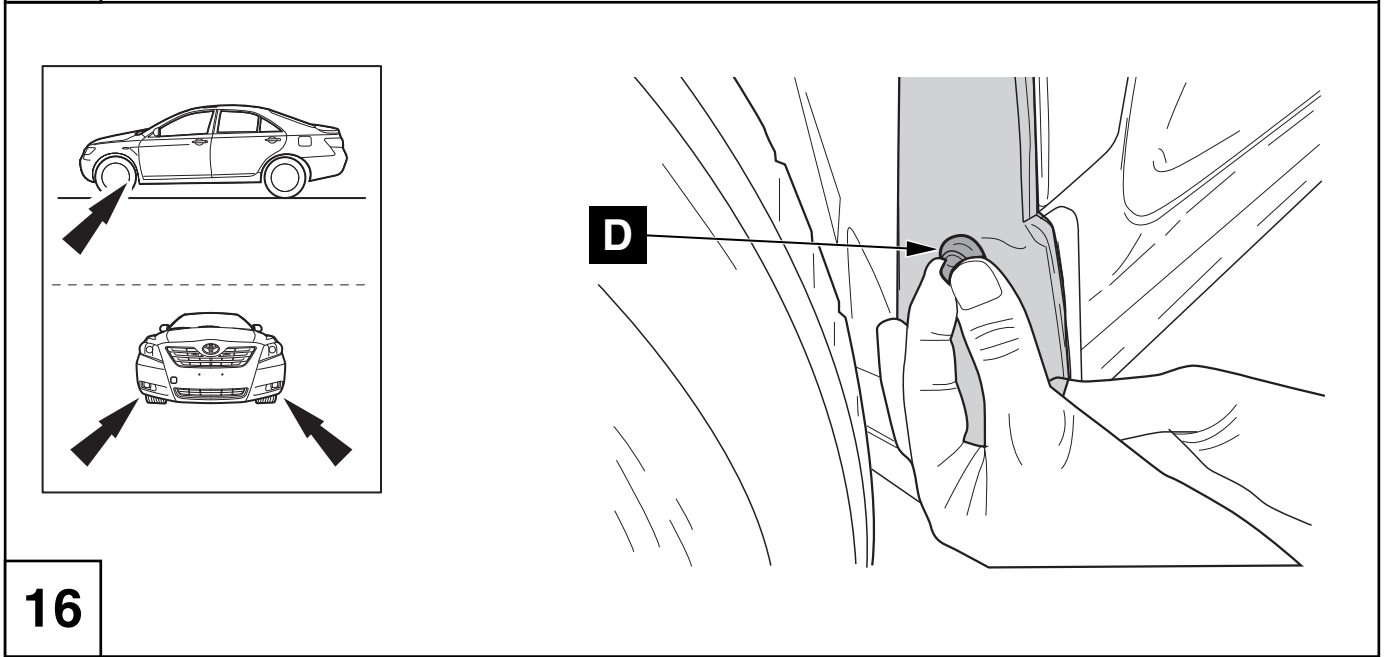




16

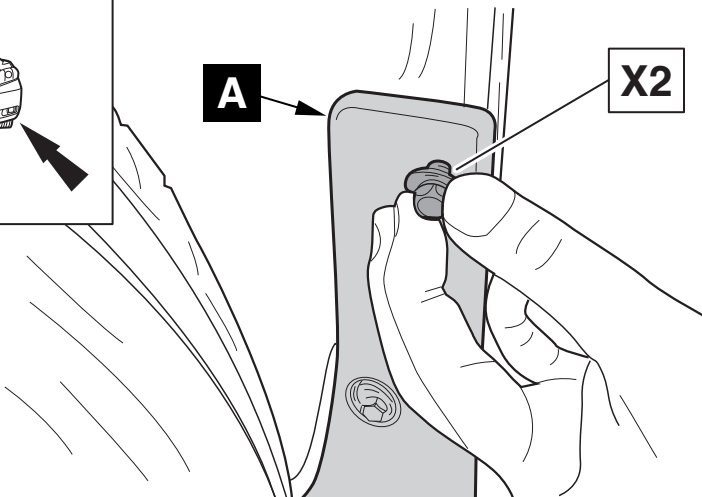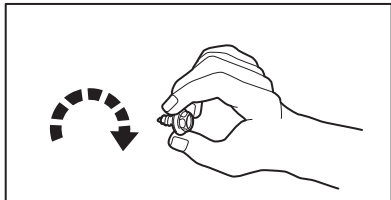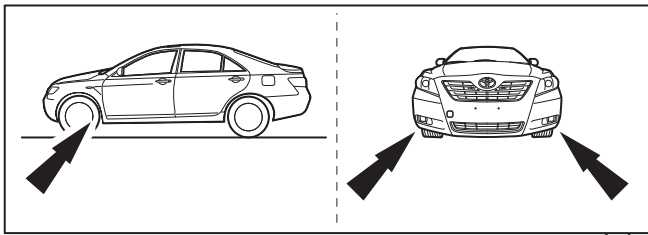



17

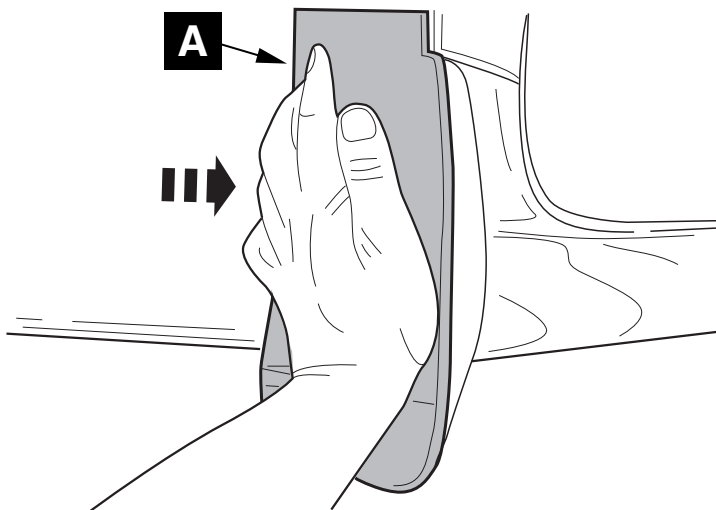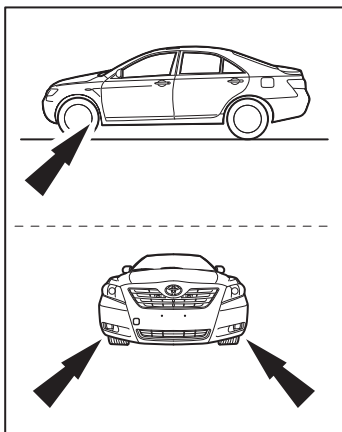

18

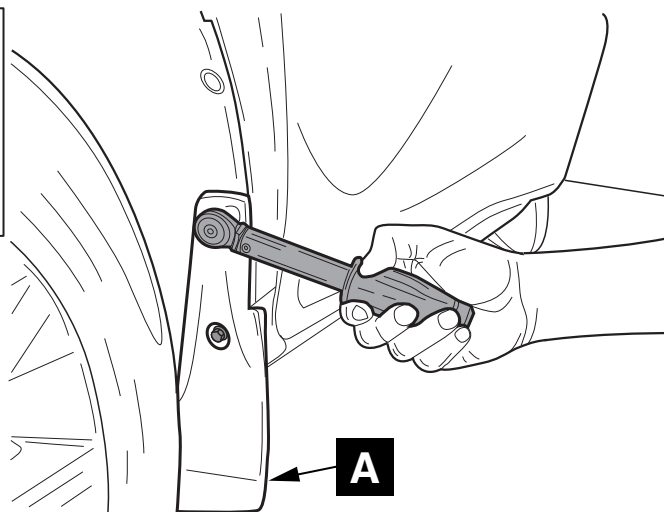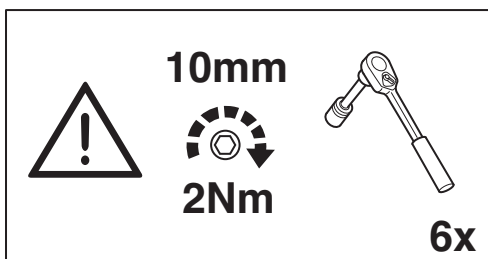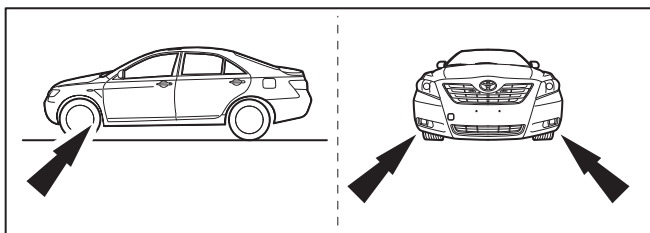

19

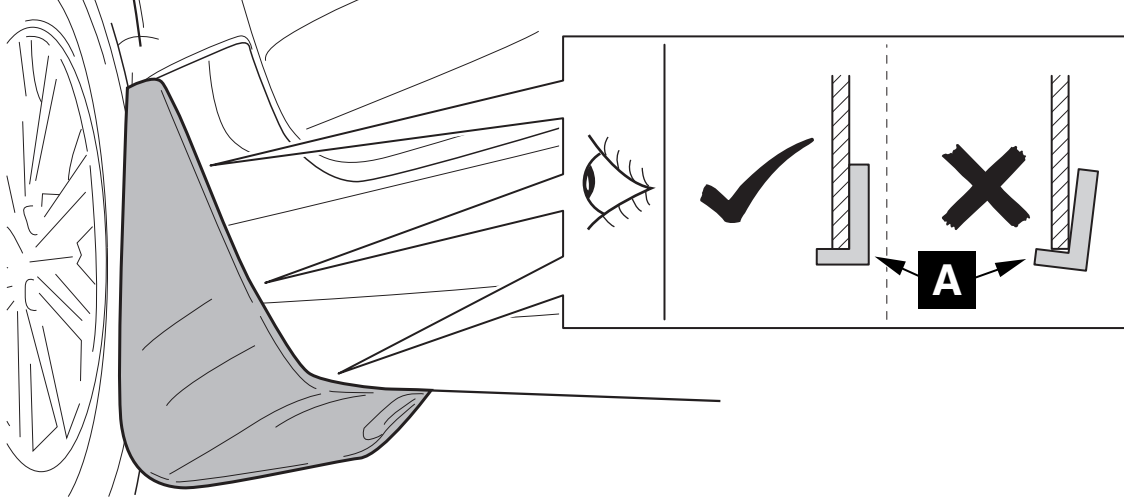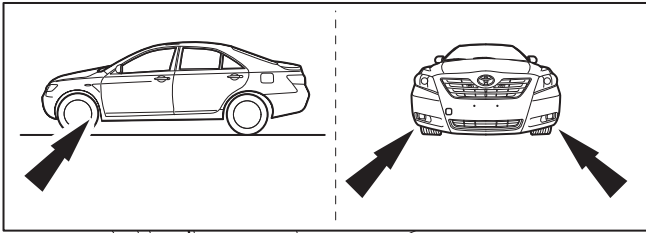

20