

**iQ**

Mudflaps front

Installation instructions




Model year: 2008  
Vehicle code: \*\*J10\*-BG\*\*\*W  
Part number: PZ416-I0960-00

Manual reference number: AIM 001 467-0

# Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted

**A**

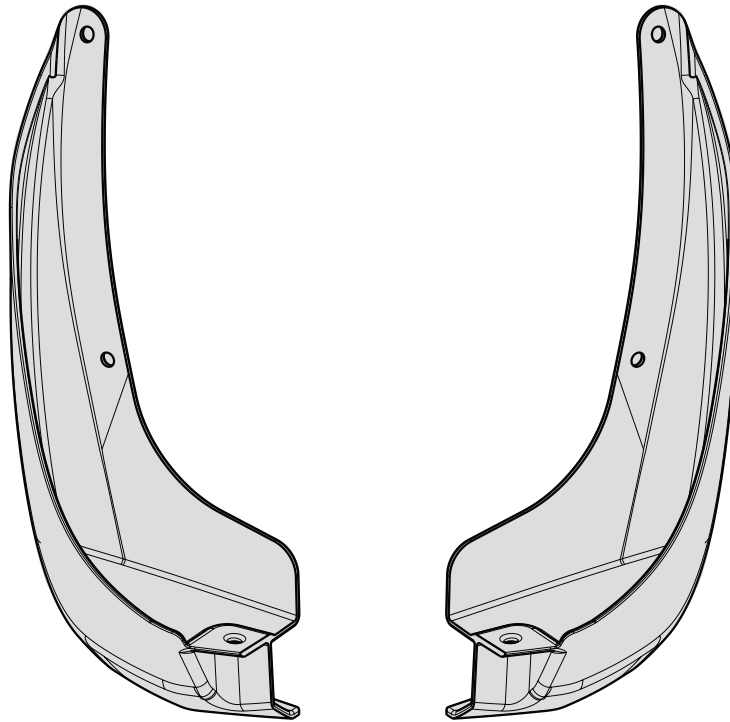


1x


**B**



4x

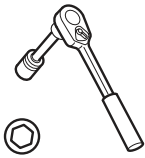


10mm

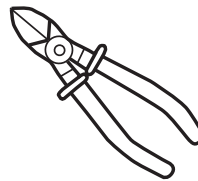





1

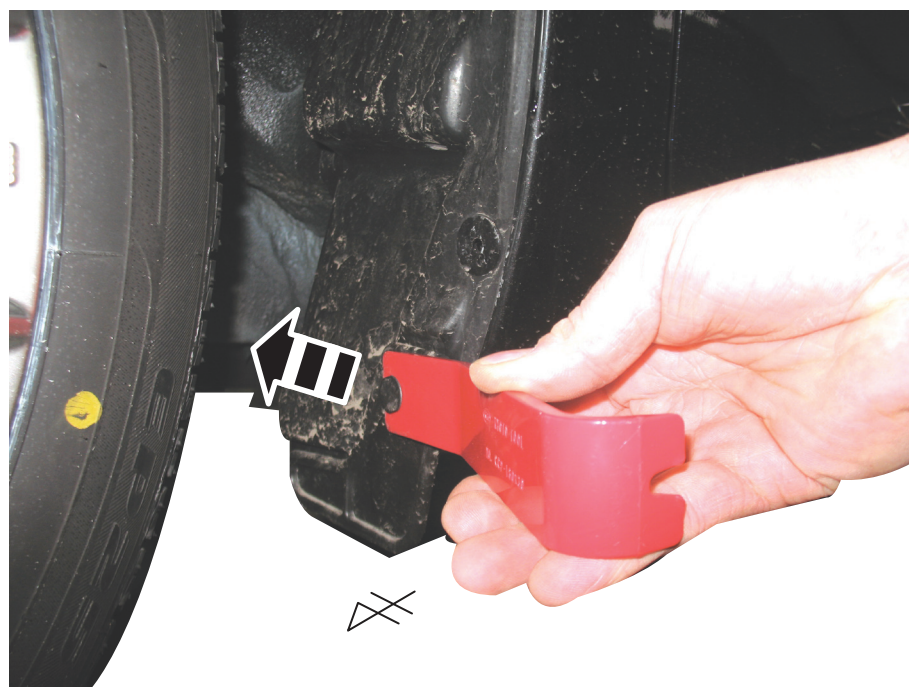


2

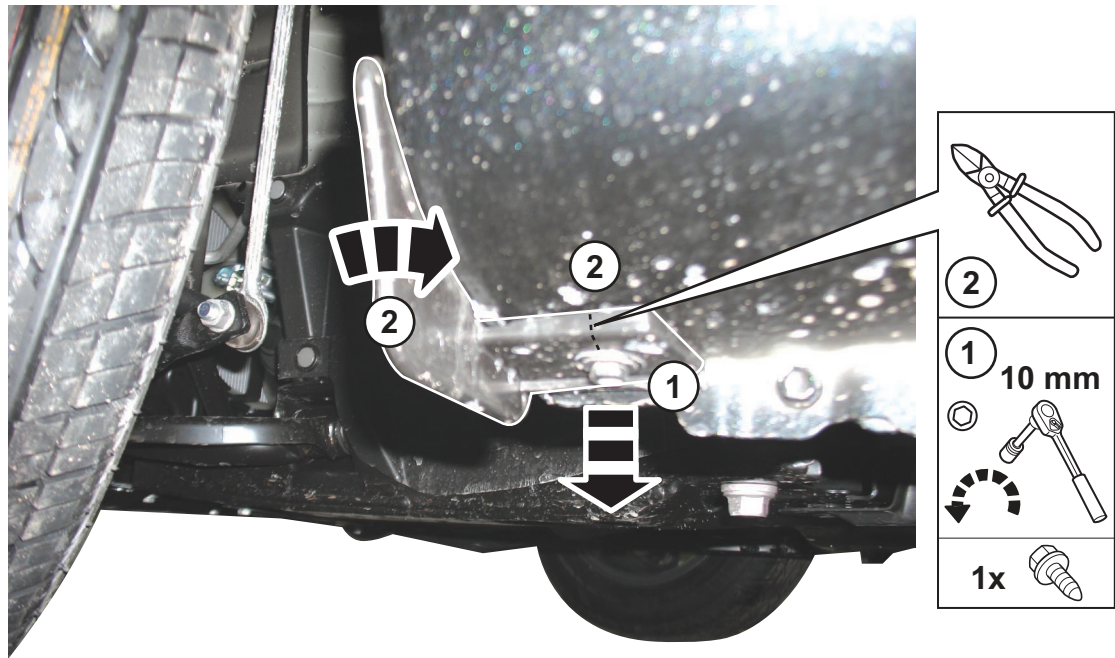

3

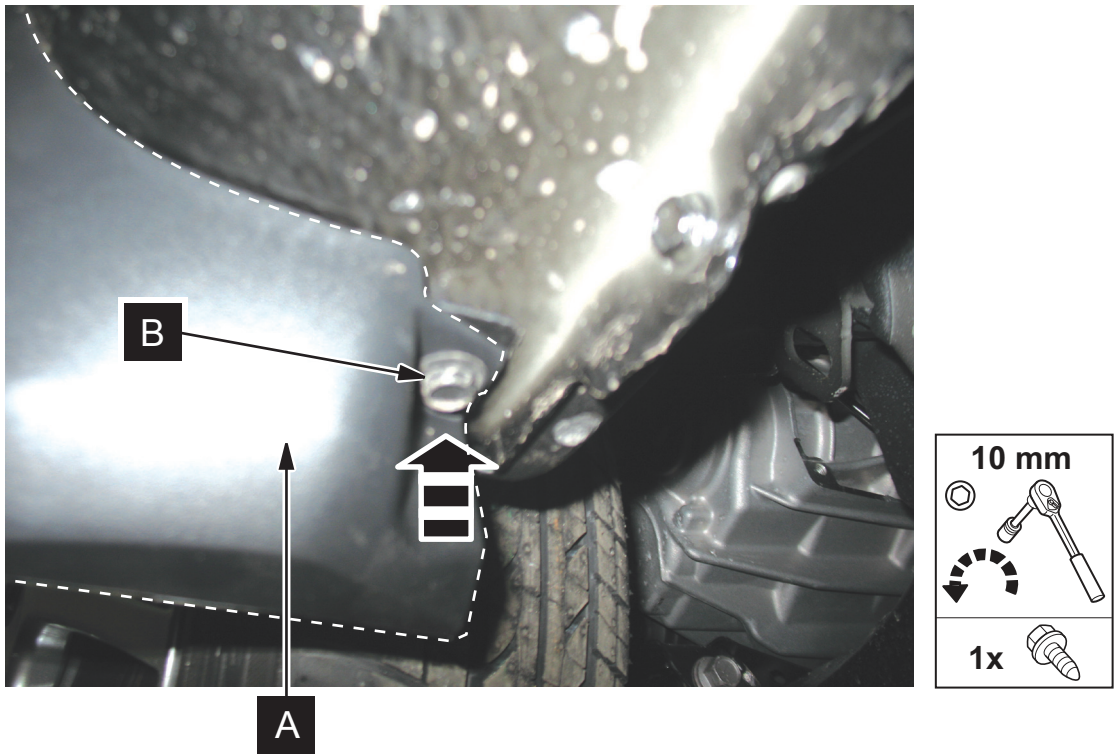

4

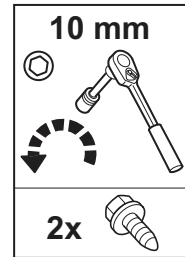

**5**

**A**