

iQ

Mudflaps rear

Installation instructions




| | |
|---------------|----------------|
| Model year: | 2008 |
| Vehicle code: | **J10*-BG***W |
| Part number: | PZ416-I0961-00 |

Manual reference number: AIM 001 466-0

Revision Record

| Rev. No. | Date | Page | Picture | Update | New | Deleted |
|----------|------|------|---------|--------|-----|---------|
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |

A

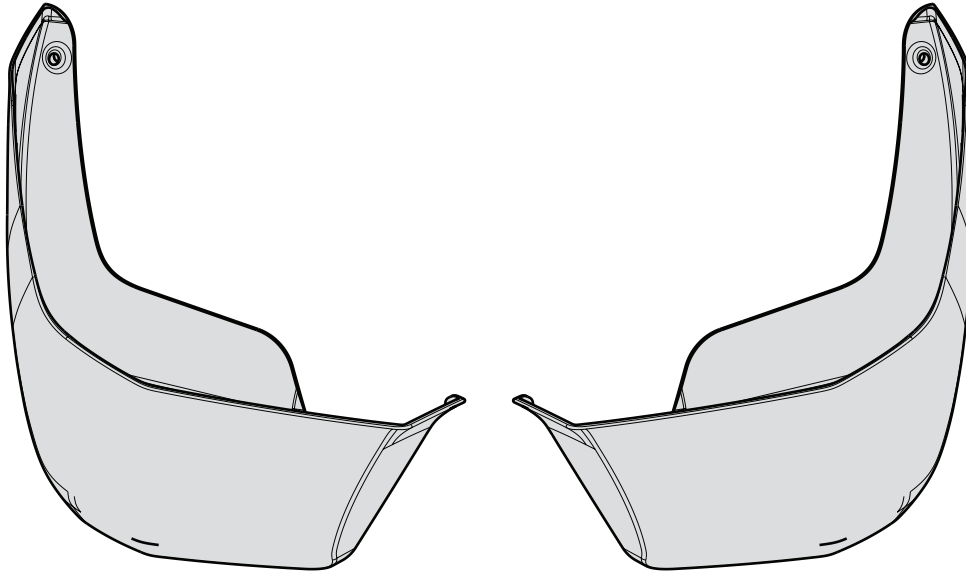

1x

B




2x

C



2x

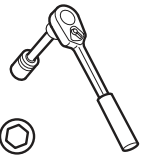


10mm





1

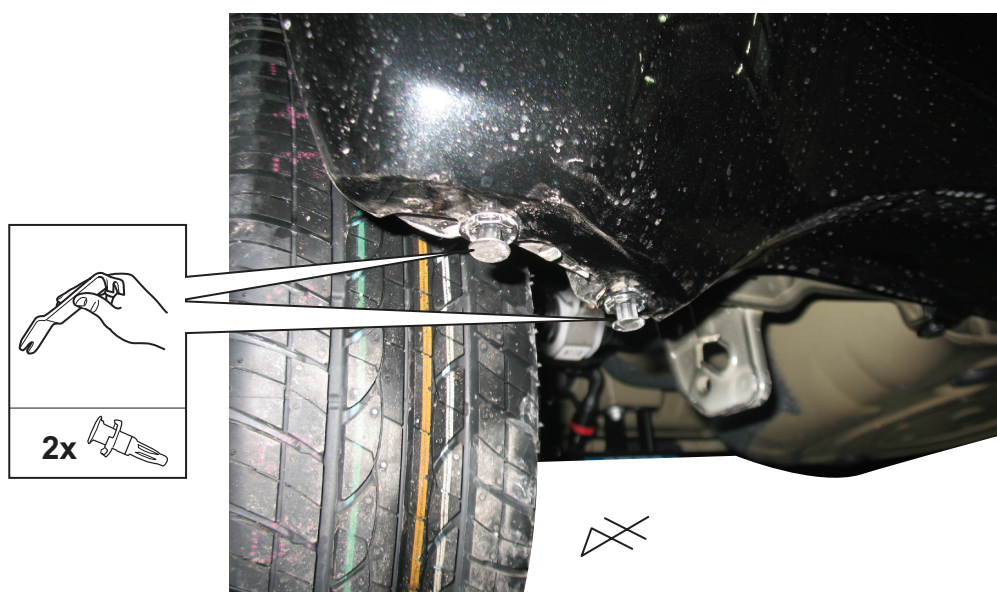

2

