



TOYOTA


RAV4


Front Mudflaps with overfender

Installation instructions






Model year : 2006
Vehicle code : **A30*-AW***W
Part number : PZ416X096200

 Weight : 0,345 kg


 Installation time : 0,20 hours

Manual reference number: AIM 000 518-0

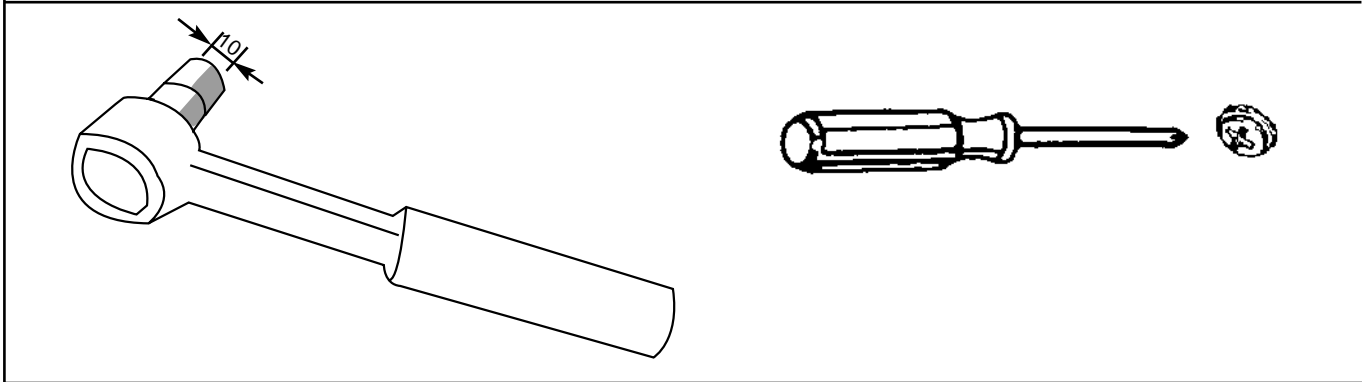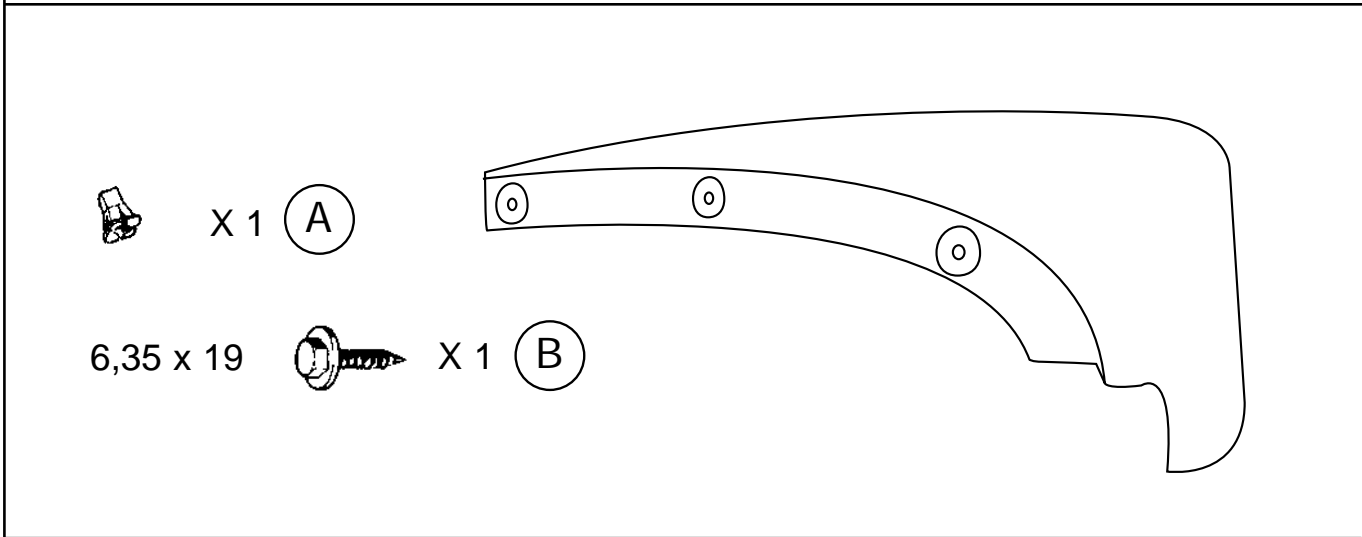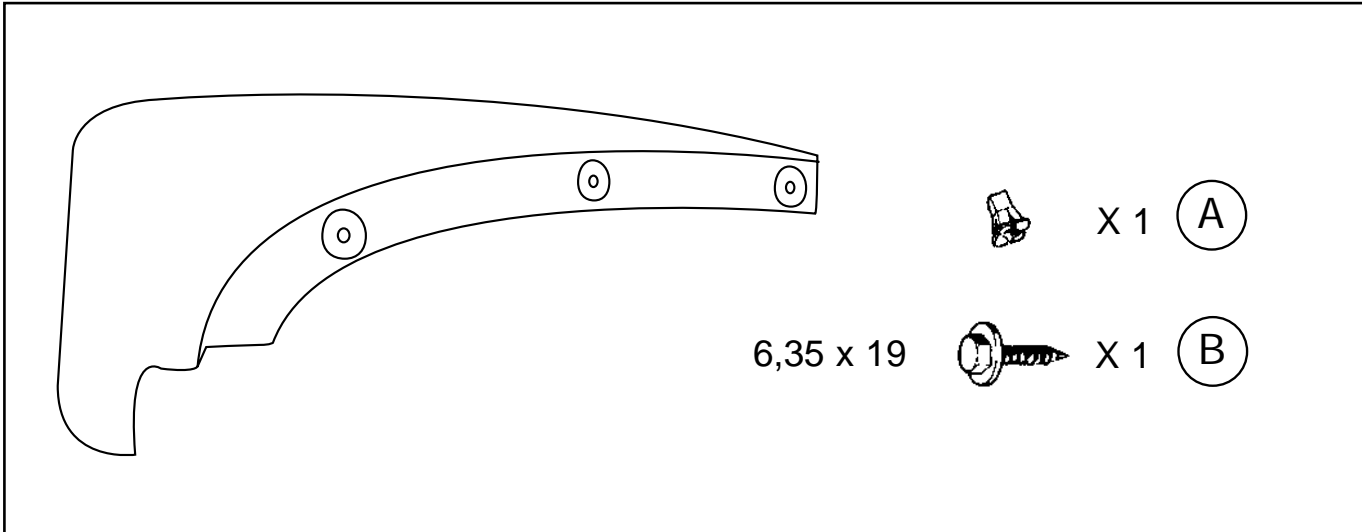


REVISION RECORD						
Rev. N°	Date	Page	Picture	Update	New	Deleted Steps


1

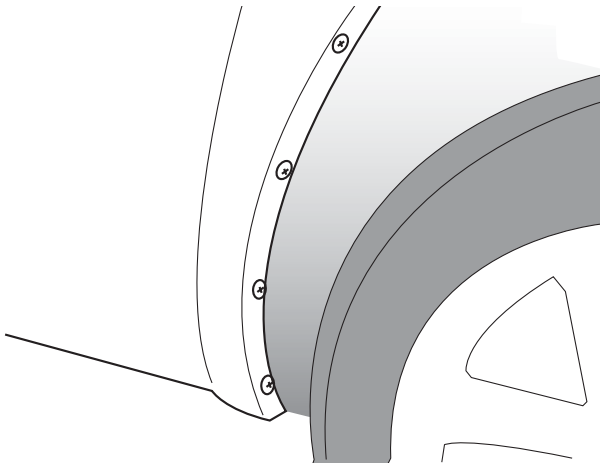


2

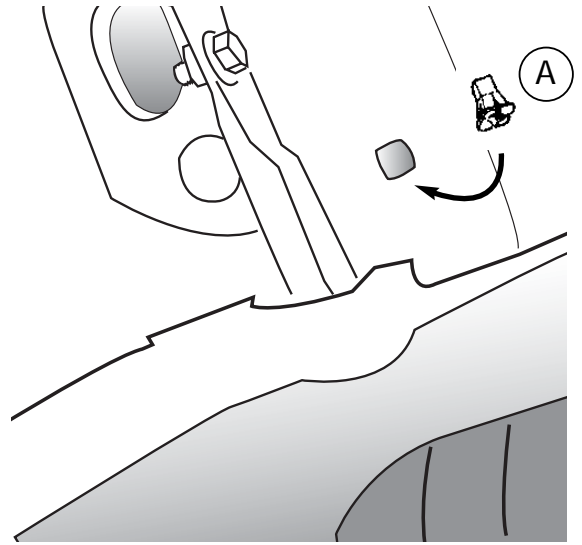


3

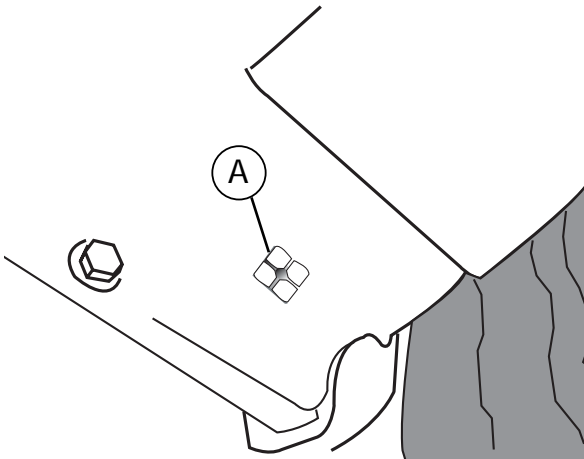


4

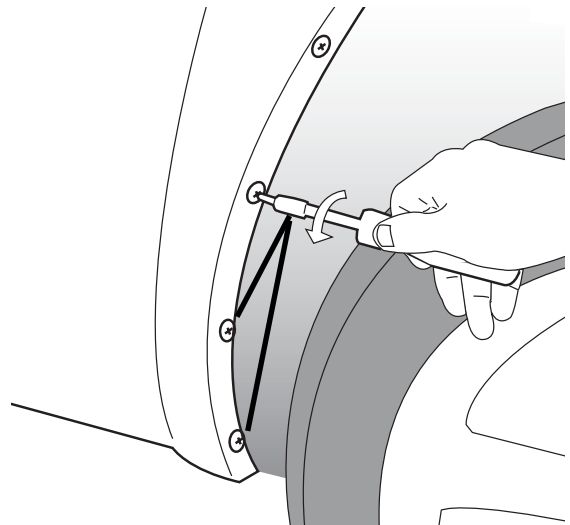


5

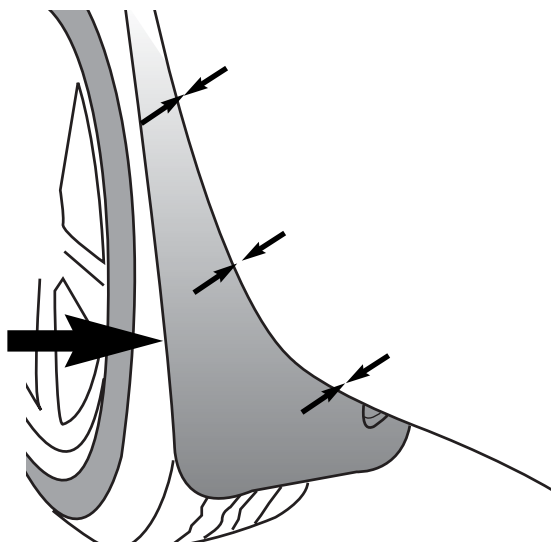

6

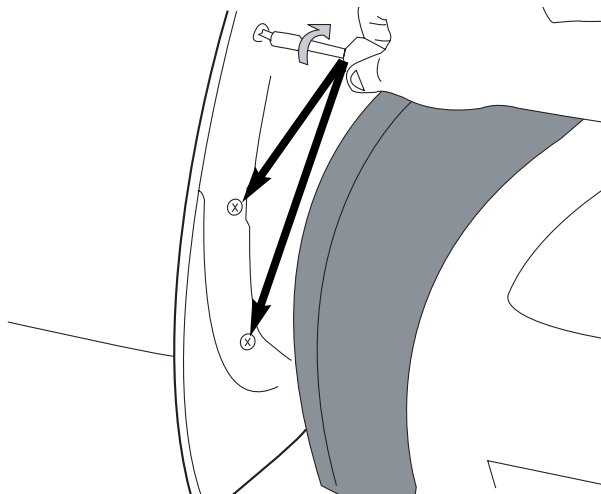

7

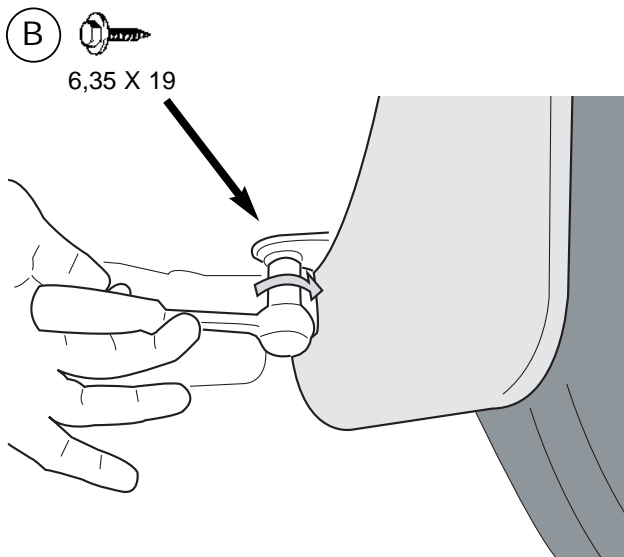

8

