



Urban Cruiser

Mudflaps rear with overfender

Installation instructions

Model year: 2009


Vehicle code: N*P11**-AHF**W

Part number: PZ416-B4961-00

Manual reference number: AIM 001 555-0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted

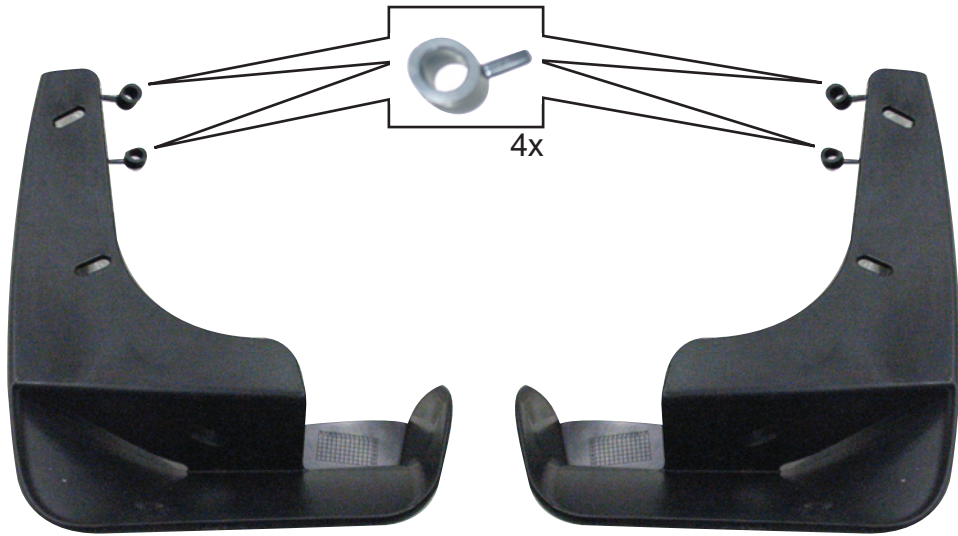A

1x

B



4x



C

2x



D

4x

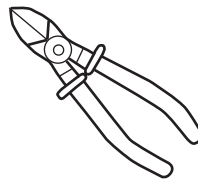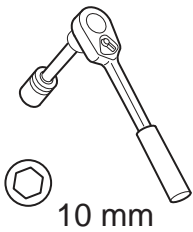

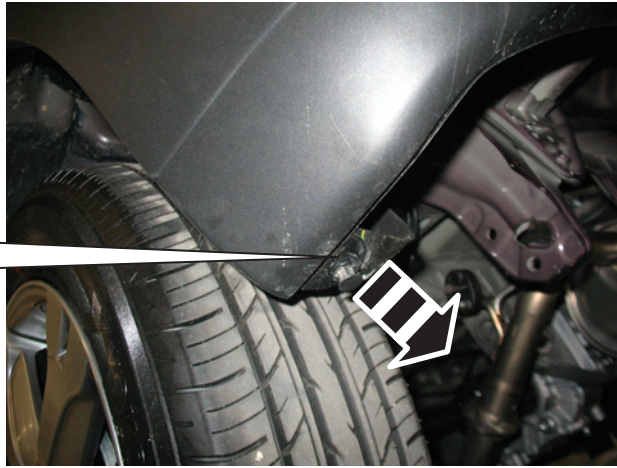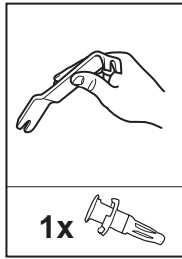

1

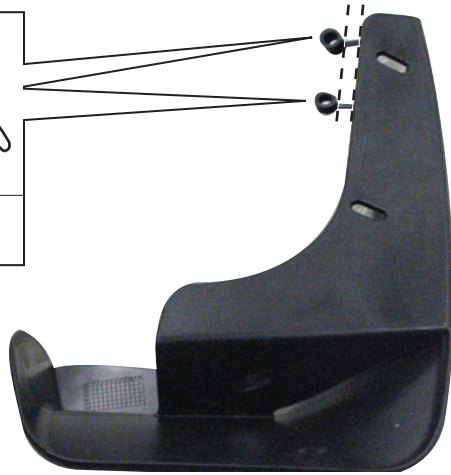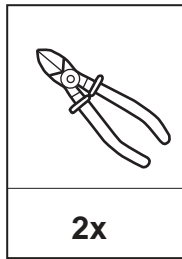

2



3

