



Urban Cruiser

Mudflaps rear without overfender

Installation instructions

Model year: 2009

Vehicle code: N*P11**-AHF**W


Part number: PZ416-B4961-00

Manual reference number: AIM 001 557-0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted

A

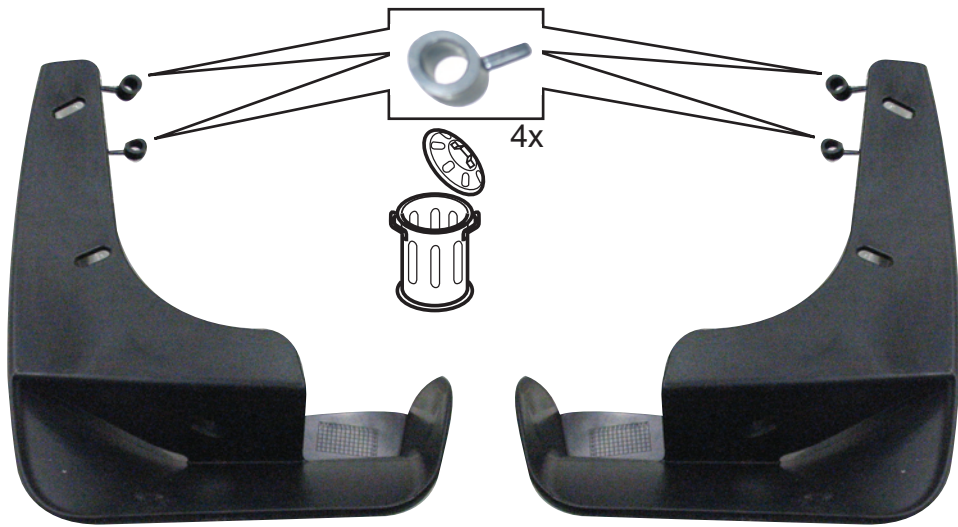


1x

B



4x

C


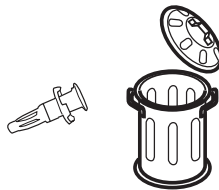




2x

D




4x

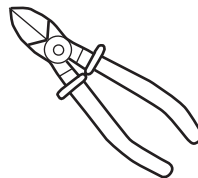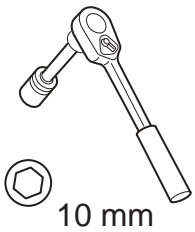


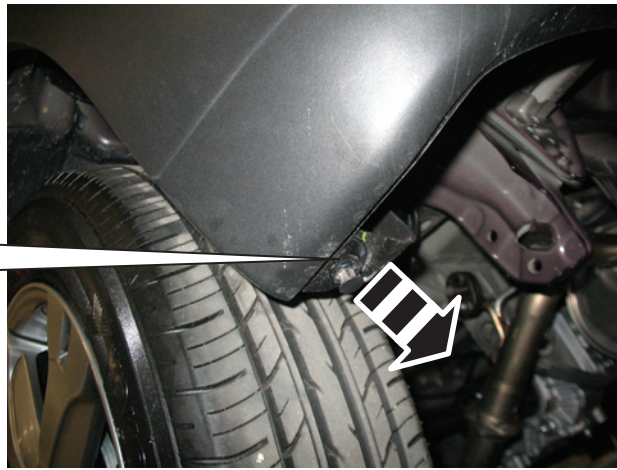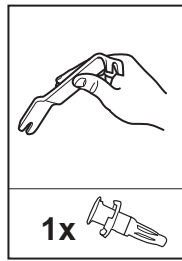

1

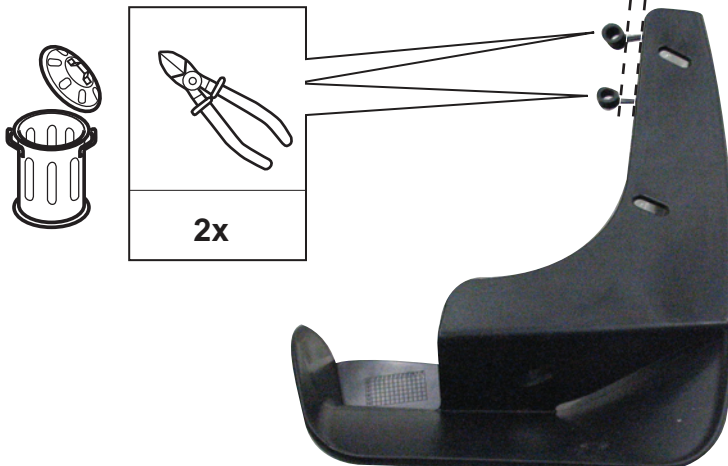

2

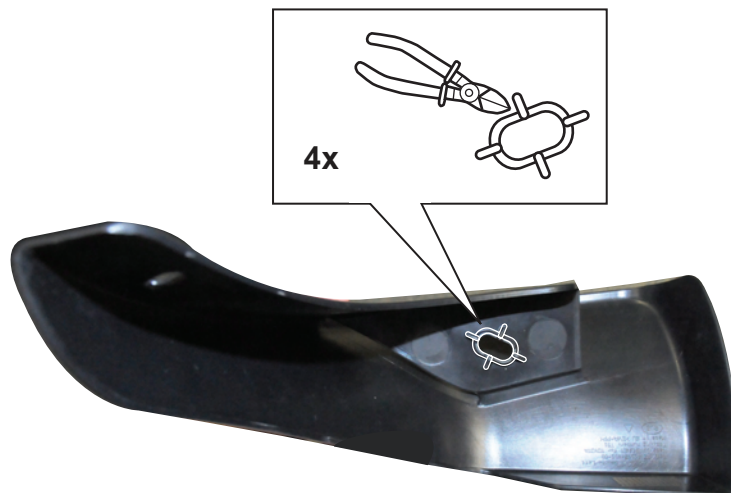

3

